



Illustrated Parts List

Model Series

44Q700

TYPE NUMBERS
0006 through 2406.

TABLE OF CONTENTS


Air Cleaner	6
Alternator	8
Blower Housing/Shrouds	6
Camshaft	3
Carburetor	5
Controls	7
Crankshaft	3
Cylinder	2
Cylinder Head	4
Electric Starter	9
Engine Sump	2
Exhaust System	5
Flywheel	7
Fuel Supply	5
Ignition	8
Kit/Gasket Set - Carburetor	5
Gasket Set - Engine	3
Gasket Set - Valve	4
Lubrication	3
Piston, Rings, Connecting Rod	3
Valves	4



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

44Q700

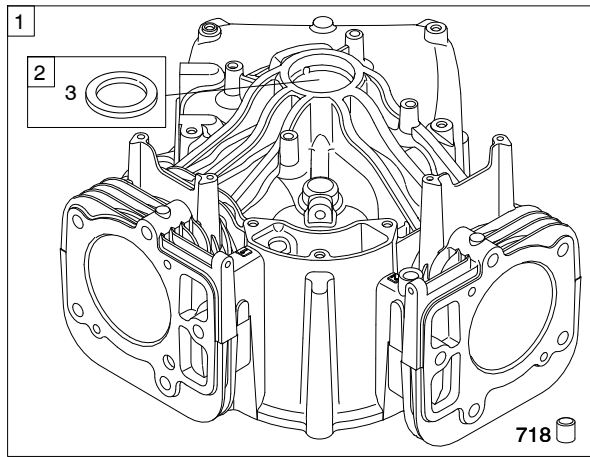

1319 WARNING LABEL




WARNING

Read the entire operating instructions before starting engine. Operate in accordance with the instructions. Do not use the engine for purposes not intended by the manufacturer. Do not use the engine for purposes not intended by the manufacturer. Do not use the engine for purposes not intended by the manufacturer. Do not use the engine for purposes not intended by the manufacturer.





REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL


1330 REPAIR MANUAL

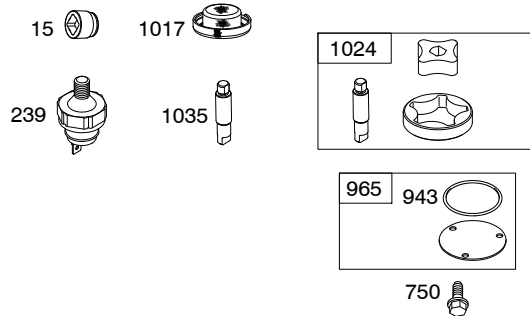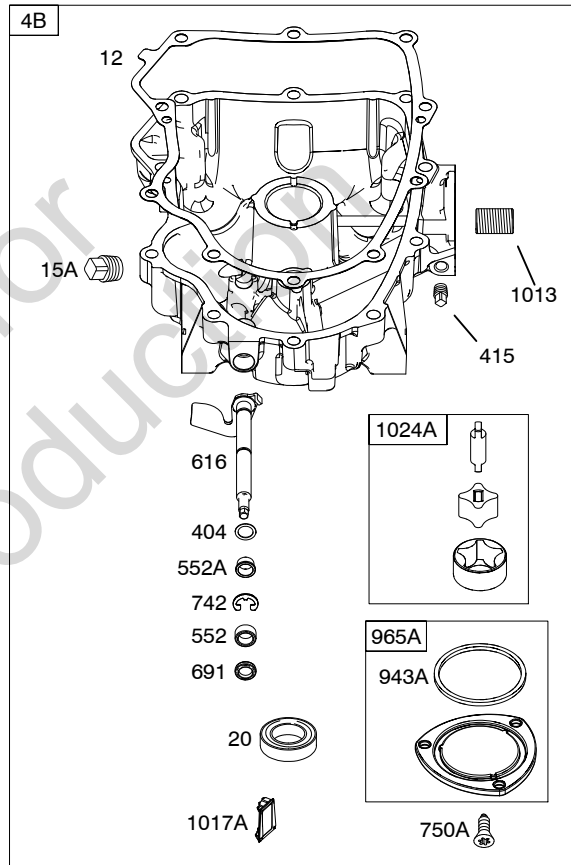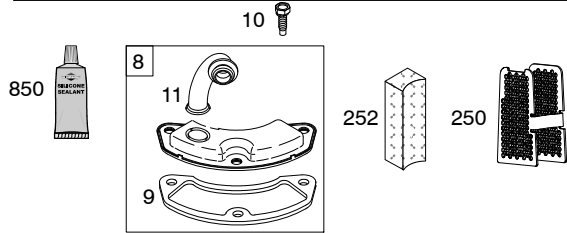




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3533-2 Assemblies include all parts shown in frames. 09/23/2010

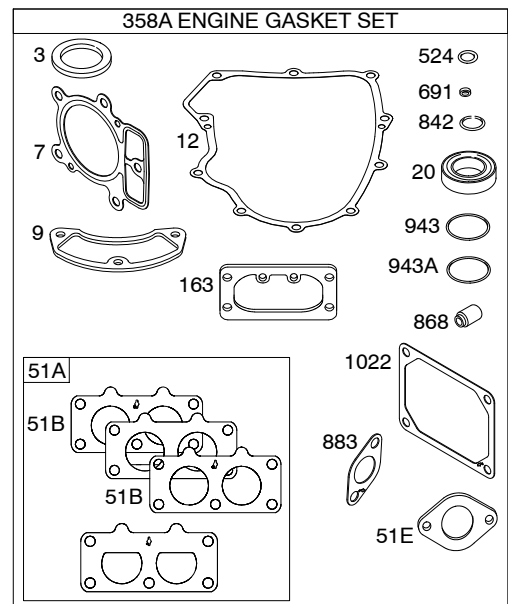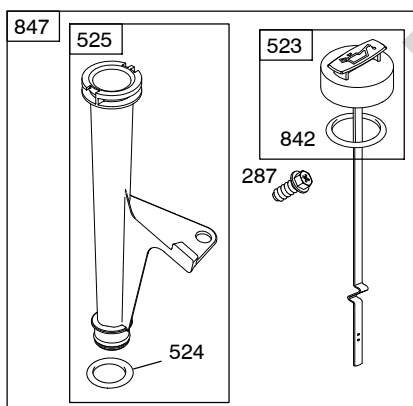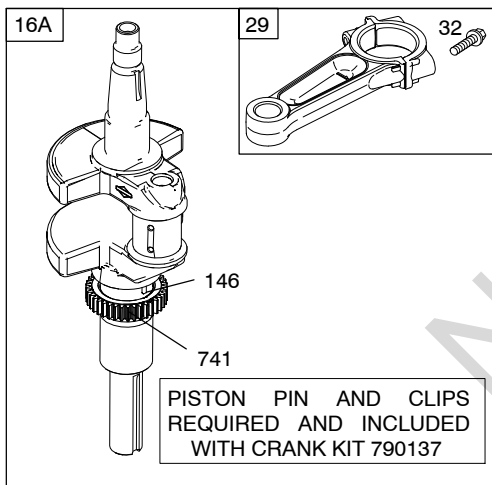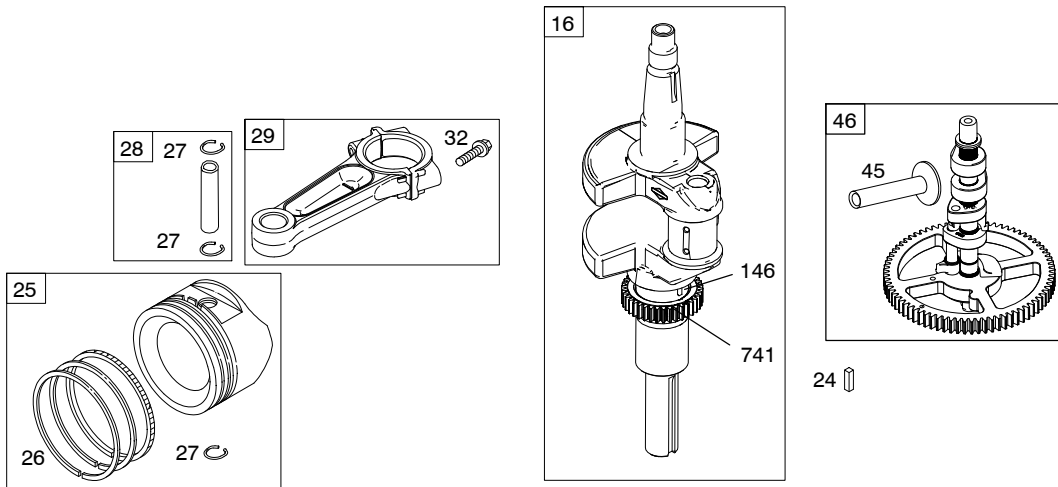






44Q700

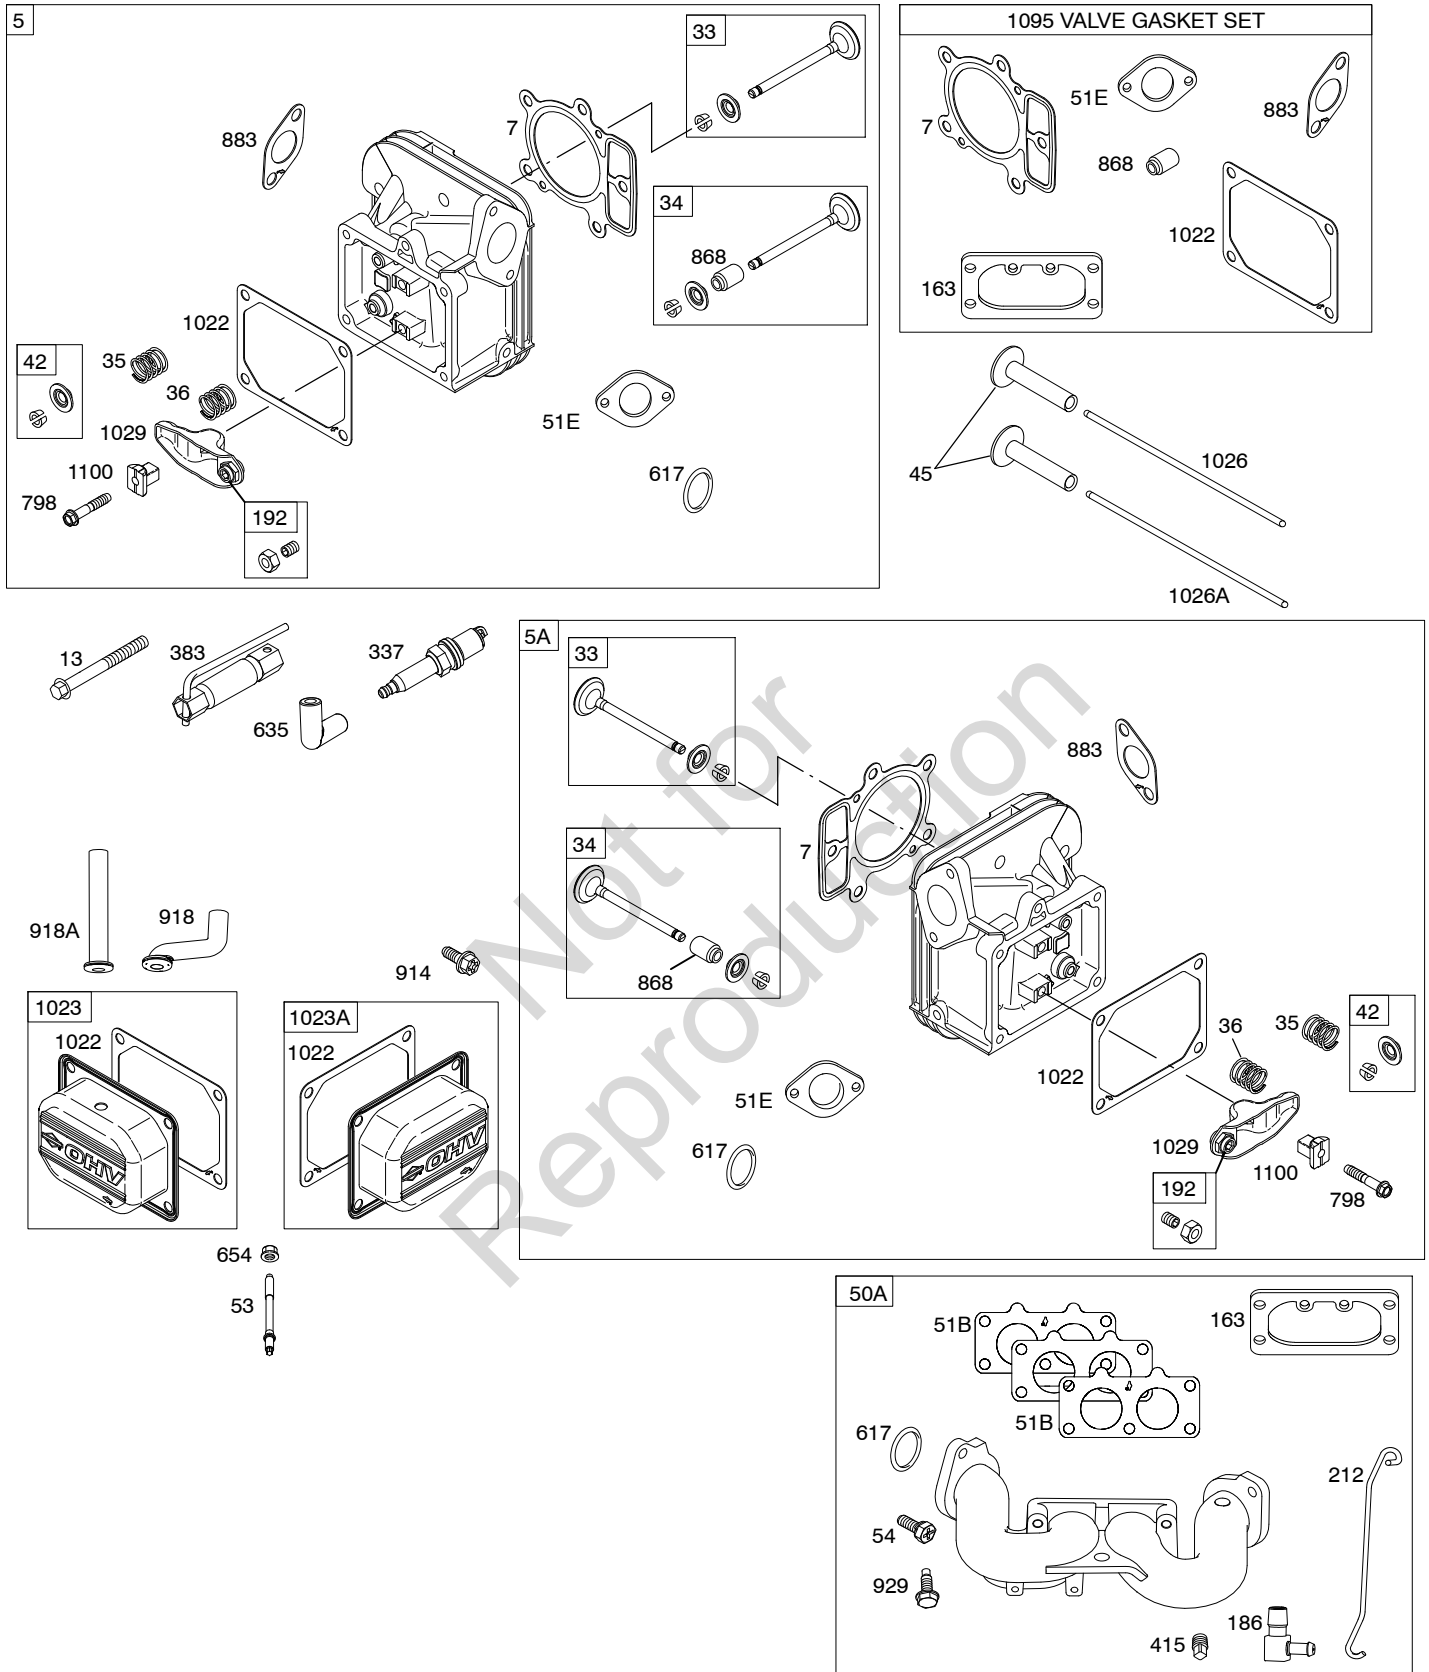


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3533-4 Assemblies include all parts shown in frames. 09/23/2010

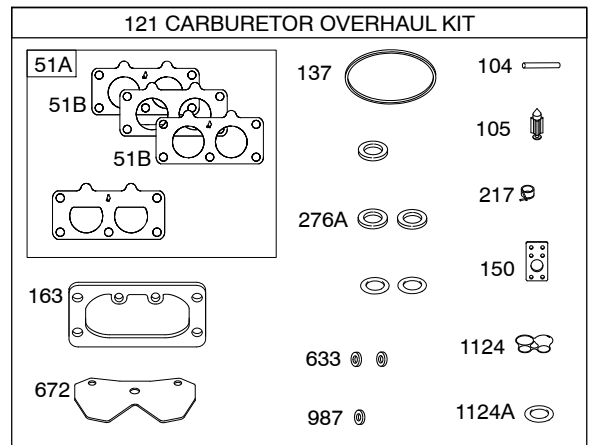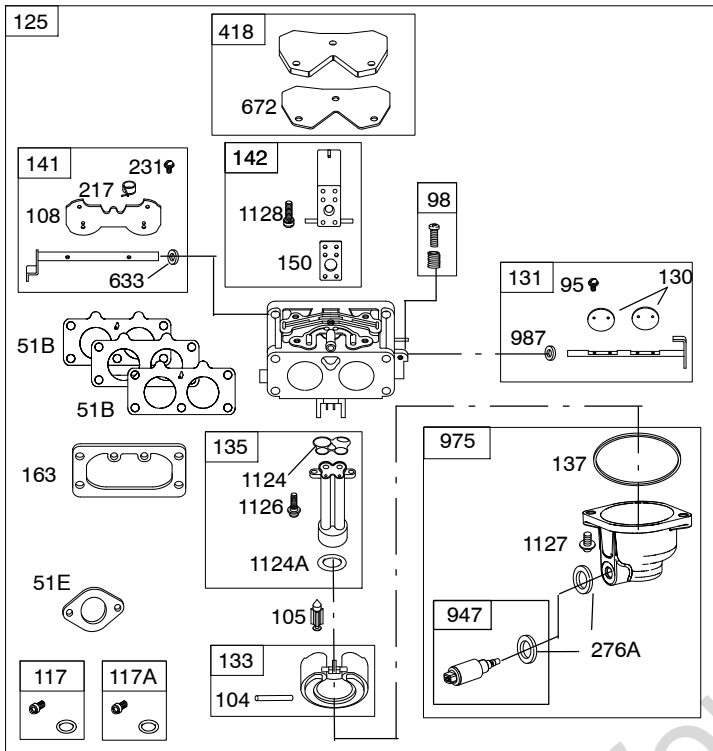









NOTE: Carburetor Illustrations Represents Several Carburetors. Parts Shown In The Service Box May Not Be Included In All Kits.

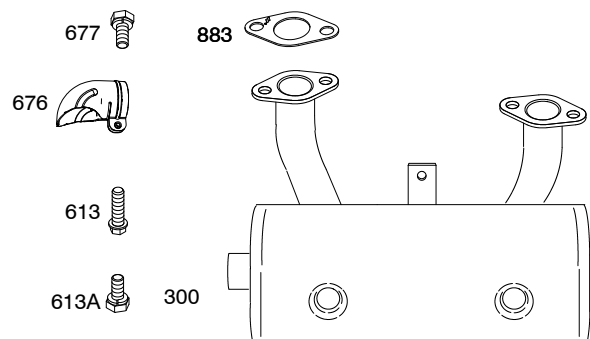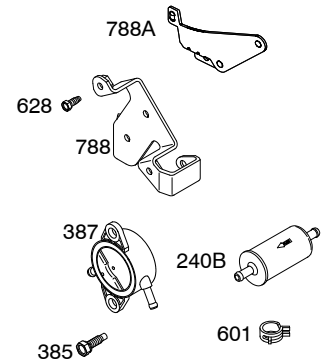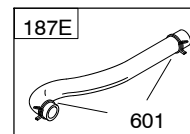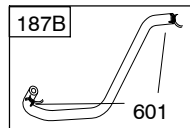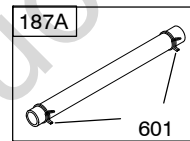

44Q700














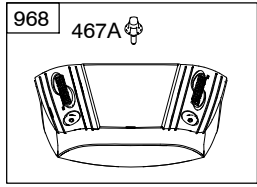


1036 EMISSIONS LABEL

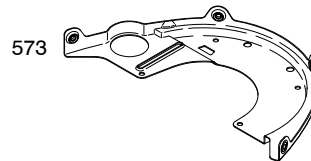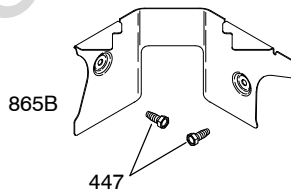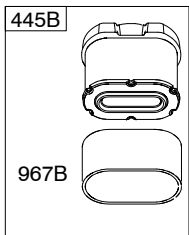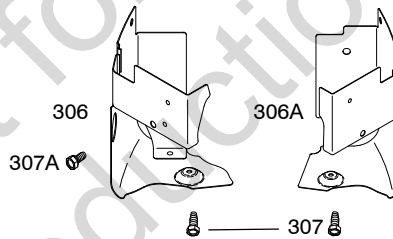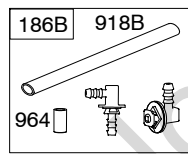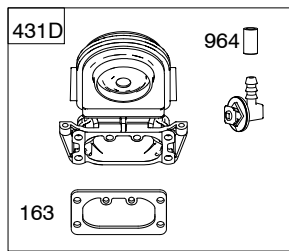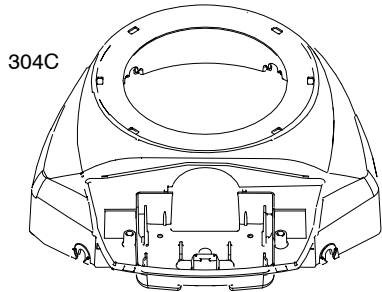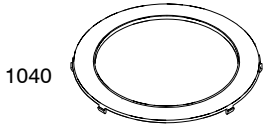

405A



Not for reproduction

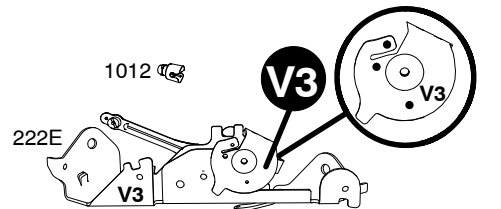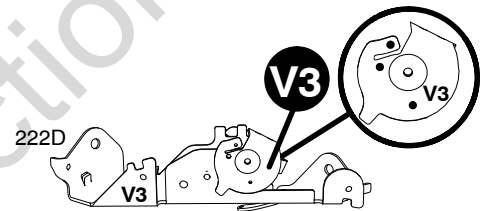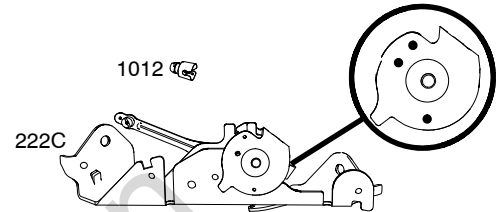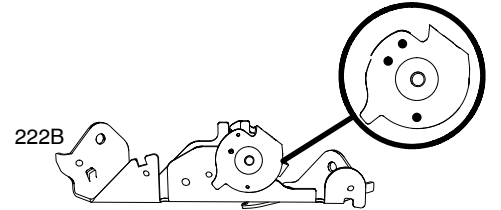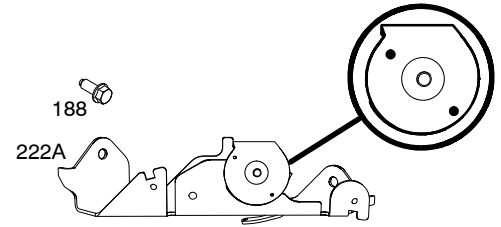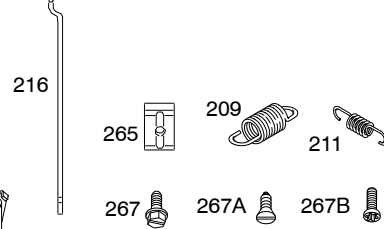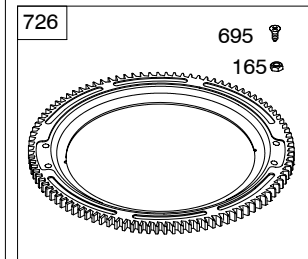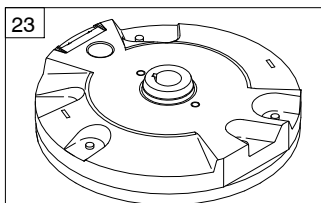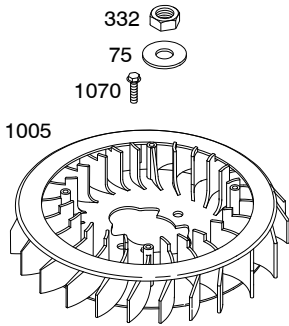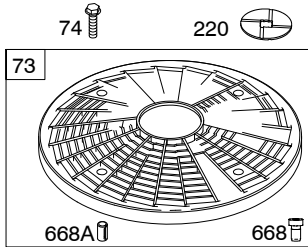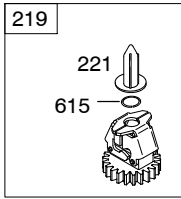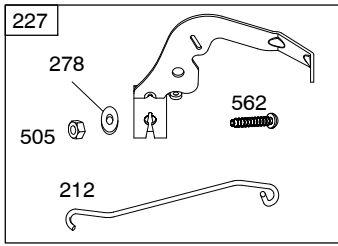

Not for
Reproduction














44Q700

10/16 AMP		5/9 AMP		TRI CIRCUIT	
474D	1059	474C	1059	474C	1059
877C		877B		877B	

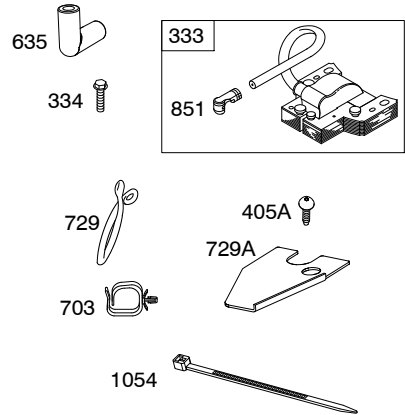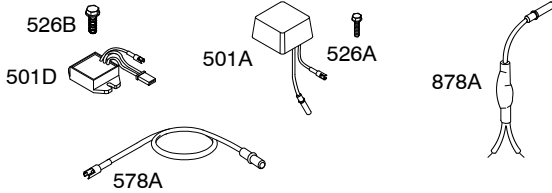


NOTE: All stators use 1119

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

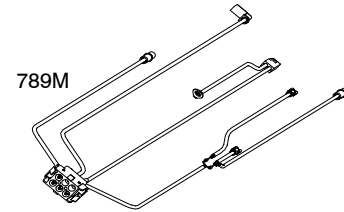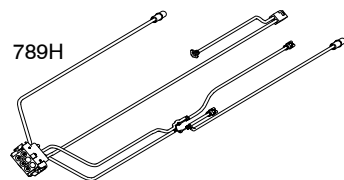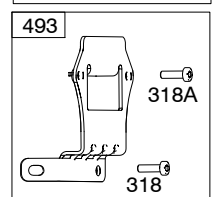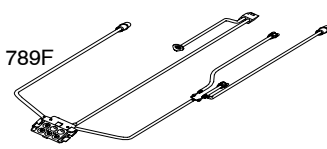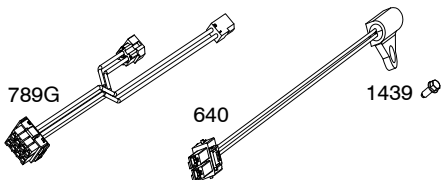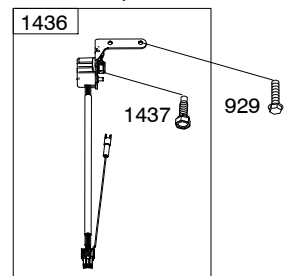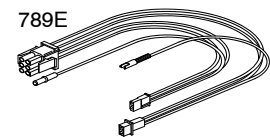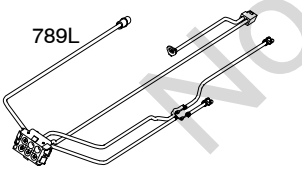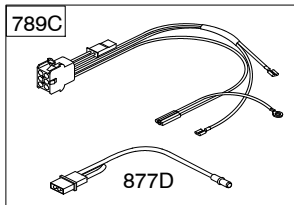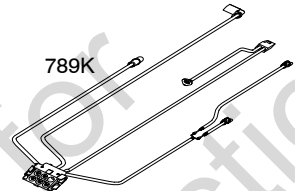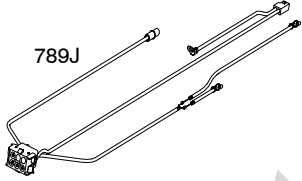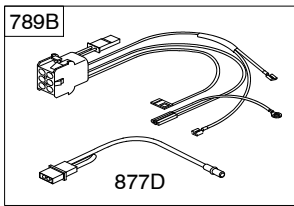

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3533-8 Assemblies include all parts shown in frames. 09/23/2010

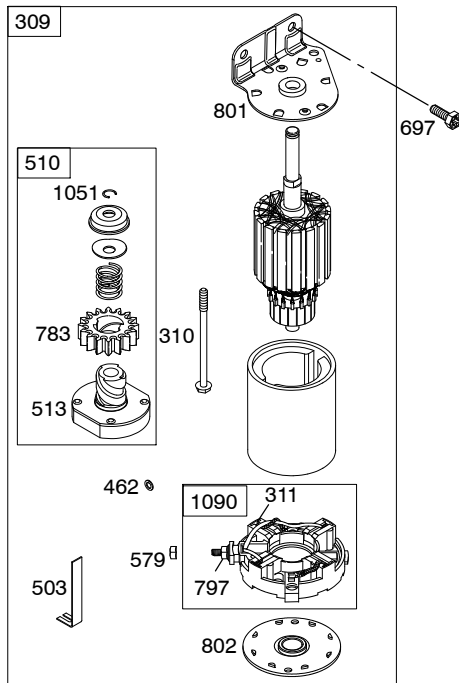

Not for
Reproduction

44Q700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
141	699722	Kit-Choke Shaft ----- Note ----- 796228 Kit-Choke Shaft Used on Type No(s). 0006, 0035, 0036, 0037, 0046, 0047, 0121, 0125, 0126, 0127, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 1406, 2406. 796228 Kit-Choke Shaft (Used After Code Date 09010400). Used on Type No(s). 0120, 1208, 1272. 699722 Kit-Choke Shaft (Used Before Code Date 09010500). Used on Type No(s). 0120, 1208, 1272.	192	690083	Adjuster-Rocker Arm			793340 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0111.
			209	798921	Spring-Governor Used on Type No(s). 0146, 2406. ----- Note ----- 799171 Spring-Governor Used on Type No(s). 0121, 0145. 793339 Spring-Governor Used on Type No(s). 0027, 0471, 1039, 1208. 793341 Spring-Governor Used on Type No(s). 0505. 793527 Spring-Governor Used on Type No(s). 0112. 799171 Spring-Governor (Used After Code Date 10072200). Used on Type No(s). 0129, 0147.			796224 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0035, 0036, 0037, 0128, 0143, 1272. 795086 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0120. 796828 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0129, 0138, 0140, 0141, 0147. 796658 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0046, 0047, 0135, 0136, 0137, 0142, 1406.
142	699726	Nozzle-Carburetor (Standard) ----- Note ----- 796871 Nozzle-Carburetor (Standard) Used on Type No(s). 0046, 0047, 0121, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 1406, 2406.						
146	690979	Key-Timing						
150	690995	Gasket-Nozzle						
163	691001	Gasket-Air Cleaner						
165	693148	Nut (Ring Gear)						
186	795985	Connector-Hose						
186A	796532	Connector-Hose						
186B	799158	Connector-Hose (EVAP)						
187A	791766	Line-Fuel (Cut to Required Length)						
187B	791881	Line-Fuel (Molded)						
187E	791801	Line-Fuel (Molded)						
188	697551	Screw (Control Bracket)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3533-12 Assemblies include all parts shown in frames. 09/23/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
211	691019	Spring-Governed Idle Used on Type No(s). 0006, 0016, 0025, 0026, 0027, 0111, 0112, 0120, 0121, 0125, 0126, 0127, 0145, 0146, 0471, 0505, 1039, 1208, 2406. ----- Note ----- 691019 Spring-Governed Idle (Used After Code Date 10072200). Used on Type No(s). 0035, 0036, 0037, 0046, 0047, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0147, 1272, 1406. 796225 Spring-Governed Idle (Used Before Code Date 10072300). Used on Type No(s). 0035, 0036, 0037, 0046, 0047, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0147, 1272, 1406.	221	841026	Cup-Governor	222E	798915	Bracket-Control (V3 Choke-A-Matic) Used on Type No(s). 0121. ----- Note ----- 798915 Bracket-Control (V3 Choke-A-Matic) (Used After Code Date 10072200). Used on Type No(s). 0035, 0036, 0037, 0135, 0136, 0137, 0142.
			222A	698761	Bracket-Control (Manual Choke) Used on Type No(s). 0006, 0016, 0025, 0026, 0027, 0111, 0112, 0120, 0125, 0126, 0127, 0471, 0505, 1039, 1208.	227	798856	Lever-Governor Control
			222B	796630	Bracket-Control (Manual Choke) (Used Before Code Date 10072300). Used on Type No(s). 0046, 0047, 0128, 0129, 0138, 0140, 0141, 0143, 0147, 1272, 1406.	231	690718	Screw (Choke Valve)
			222C	796226	Bracket-Control (Choke-A-Matic) (Used Before Code Date 10072300). Used on Type No(s). 0035, 0036, 0037, 0135, 0136, 0137, 0142.	239	792028	Switch-Oil Pressure ----- Note ----- 697049 Switch-Oil Pressure Used on Type No(s). 0111, 0112, 0128, 0143.
			222D	798916	Bracket-Control (V3 Manual Choke) Used on Type No(s). 0145, 0146, 2406. ----- Note ----- 798916 Bracket-Control (Used After Code Date 10072200). Used on Type No(s). 0046, 0047, 0128, 0129, 0138, 0140, 0141, 0143, 0147, 1272, 1406.	240B	695666	Filter-Fuel
212	695238	Link-Throttle				250	690957	Retainer-Breather
213	691021	Bracket-Choke Control				252	794389	Collector-Oil
216	691022	Link-Choke ----- Note ----- 796879 Link-Choke Used on Type No(s). 0046, 0047, 0128, 0129, 0138, 0140, 0141, 0143, 0147, 1272, 1406, 2406. 796229 Link-Choke Used on Type No(s). 0035, 0036, 0037, 0121, 0135, 0136, 0137, 0142.				265	691024	Clamp-Casing
						267	691044	Screw (Casing Clamp) (.630 Length)
						267A	695134	Screw (Casing Clamp) (.625 Length)
						267B	792629	Screw (Casing Clamp) (.703 Length)
						276A	695410	Washer-Sealing
						278	792651	Washer (Governor Control Lever)
						287	697820	Screw (Dipstick Tube)
						300	626226	Muffler
						304C	797407	Housing-Blower (Black) ----- Note ----- 798579 Housing-Blower (Grey)
217	695409	Spring-Choke Return						
219	793338	Gear-Governor						
220	690412	Washer (Governor Gear)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

44Q700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691005	Screw (Blower Housing)	337	491055s	Plug-Spark ----- Note -----	467A	790697	Knob-Air Cleaner
305B	790690	Screw (Blower Housing to Intake Elbow)		691043	Plug-Spark Used on Type No(s). 0138, 0140, 0141, 0142, 0145, 0146, 0505.	474C	696457	Alternator (5/9 Amp. Regulated Or Tri Circuit)
306	796852	Shield-Cylinder (Cylinder 1)		792015	Plug-Spark Used on Type No(s). 0112.	474D	696458	Alternator (10/16 Amp Regulated)
306A	798855	Shield-Cylinder (Cylinder 2) (Used After Code Date 10052300). ----- Note ----- 796541 Shield- Cylinder (Cylinder 2) (Used Before Code Date 10052400 and After Code Date 08080400). 793205 Shield- Cylinder (Cylinder 2)	358A	694012	Gasket Set-Engine	493	797176	Bracket-Electronic Choke Module
307	691003	Screw (Cylinder Shield)	363	19203	Puller-Flywheel	501A	794360	Regulator (5/9 Amp Regulated)
307A	697551	Screw (Cylinder Shield)	383	19576S	Wrench-Spark Plug	501D	797375	Regulator (10/16 Amp Regulated)
309	795121	Motor-Starter ----- Note ----- 497595 Motor-Starter Used on Type No(s). 1406, 2406.	385	797409	Screw (Fuel Pump Mounted On Blower Housing) ----- Note ----- 697551 Screw (Fuel Pump Mounted On Fuel Pump Bracket)	503	691532	Strap-Starter
310	691263	Screw (Starter Motor) ----- Note ----- 690323 Screw (Starter Motor) Used on Type No(s). 1406, 2406.	387	808656	Pump-Fuel	505	691029	Nut (Governor Control Lever)
311	497608	Brush Set	404	690442	Washer (Governor Crank)	510	696541	Drive-Starter
318	691127	Screw (Mounting Bracket)	405A	697820	Screw (Backplate)	512	796530	Hose-Oil Drain
318A	792629	Screw (Electronic Choke Module To Bracket)	415	794903	Plug	513	692024	Clutch-Drive
332	691059	Nut (Flywheel)	418	795912	Plate-Carburetor	523	691036	Dipstick
333	691060	Armature-Magneto	431D	798860	Elbow-Intake (Used After Code Date 10053100). ----- Note ----- 792297 Elbow-Intake (Used Before Code Date 10060100).	524	691032	Seal-Dipstick Tube
334	691061	Screw (Magneto Armature)	445B	792105	Filter-Air Cleaner Cartridge	525	691037	Tube-Dipstick
			447	691003	Screw (Air Guide Cover)	526A	691129	Screw (Regulator)
			462	691261	Washer (Starter Cable)	526B	697551	Screw (Regulator)
						552	690552	Bushing-Governor Crank ----- Note ----- 796638 Bushing- Governor Crank Used on Type No(s). 0006, 0035, 0036, 0037, 0046, 0047, 0120, 0121, 0125, 0126, 0127, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 1208, 1272, 1406, 2406.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3533-14 Assemblies include all parts shown in frames. 09/23/2010

44Q700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
552A	690553	Bushing-Governor Crank	633	690998	Seal-Choke/Throttle Shaft	750A	796208	Screw (Oil Pump Cover) (Used After Code Date 08071700).
562	690311	Bolt (Governor Control Lever)			----- Note -----	783	695708	Gear-Pinion
573	790444	Plate-Back			699813 Seal-Choke/Throttle Shaft	788	691039	Bracket-Fuel Pump (Used Before Code Date 06072800).
578A	691208	Wire Assembly (18" Used On Cylinder #2 Mounted Regulator)			Used on Type No(s). 0006, 0035, 0036, 0037, 0046, 0047, 0121, 0125, 0126, 0127, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 1406, 2406.	788A	793145	Bracket-Fuel Pump (Used After Code Date 06072700).
		----- Note -----				789B	698330	Harness-Wiring
		797463 Wire Assembly (14" Used On Cylinder #1 Mounted Regulator)				789C	696576	Harness-Wiring
579	691029	Nut (Starter Cable)				789E	695050	Harness-Wiring
601	791850	Clamp-Hose (Green)			699813 Seal-Choke/Throttle Shaft (Used After Code Date 09010400).	789F	796860	Harness-Wiring
		----- Note -----			Used on Type No(s). 0120, 1208, 1272.	789G	796914	Harness-Wiring
		691038 Clamp-Hose (Black)			690998 Seal-Choke/Throttle Shaft (Used Before Code Date 09010500).	789H	796960	Harness-Wiring
613	690341	Screw (Muffler)	635	692076	Boot-Spark Plug	789J	797424	Harness-Wiring
613A	690297	Screw (Muffler)	640	796913	Thermistor	789K	797460	Harness-Wiring
615	698290	Retainer-Governor Shaft	654	690958	Nut (Carburetor)	789L	797461	Harness-Wiring
616	691045	Crank-Governor				789M	797492	Harness-Wiring
617	697891	Seal-O Ring (Intake Manifold)	668	691500	Spacer	797	693167	Nut (Brush Retainer)
628	697551	Screw (Fuel Pump Bracket) (Used Before Code Date 06072800).	668A	691215	Spacer	798	697890	Screw (Rocker Arm)
			672	690234	Gasket-Carburetor Plate	801	691283	Cap-Drive
			676	697816	Deflector-Muffler	802	691286	Cap-End
			677	691660	Screw (Deflector)	842	691031	Seal-O Ring (Dipstick Tube)
			691	790574	Seal-Governor Shaft	847	499602	Dipstick/Tube Assembly
			695	693149	Screw (Ring Gear)	850	100106	Sealant-Liquid
			697	791680	Screw (Drive Cap)	851	493880s	Terminal-Spark Plug
			703	691010	Clip	865B	792286	Cover-Air Guide (Valley)
			718	690959	Pin-Locating	868	690968	Seal-Valve
			726	499612	Gear-Ring	877B	393537	Wire/Connector-Alternator
			729	694123	Clip-Wire	877C	399916	Wire/Connector-Alternator
			729A	797454	Clip-Wire	877D	790544	Wire/Connector-Alternator
			741	690980	Gear-Timing	878A	691955	Harness-Alternator
			742	690328	Retainer-E Ring	883	690970	Gasket-Exhaust
			750	696999	Screw (Oil Pump Cover) (Used Before Code Date 08071800).	914	691127	Screw (Rocker Cover)
						918	793147	Hose-Vacuum
						918A	797408	Hose-Vacuum (Length 3.2 Inches)
								----- Note -----
								694000 Hose-Vacuum (Length 1.6 Inches)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

44Q700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
918B	799160	Hose-Vacuum (Length 9.4 Inches)	1022	690971	Gasket-Rocker Cover	1051	691265	Ring-Retaining
929	695239	Screw (Choke Control Bracket)	1023	793146	Cover-Rocker (Cylinder 1) (Used After Code Date 06072700).	1054	280275	Tie-Cable
943	690589	Seal-O Ring (Oil Pump Cover) (Used Before Code Date 08071800).			----- Note ----- 499599 Cover-Rocker (Cylinder 1) (Used Before Code Date 06072800).	1058	277103	Operator's Manual
943A	796222	Seal-O Ring (Oil Pump Cover) (Used After Code Date 08071700).	1023A	499600	Cover-Rocker (Cylinder 2)	1059	698516	Kit-Screw/Washer Screw (Flywheel Fan)
947	798779	Solenoid-Fuel	1024	794644	Pump-Oil (Used Before Code Date 08071800).	1070	791680	Screw (Flywheel Fan)
964	799159	Cap-Connector	1024A	796220	Pump-Oil (Used After Code Date 08071700).	1090	691293	Retainer-Brush
965	499613	Cover-Oil Pump (Used Before Code Date 08071800).	1026	690981	Rod-Push (Steel)	1095	694013	Gasket Set-Valve
965A	796221	Cover-Oil Pump (Used After Code Date 08071700).	1026A	690982	Rod-Push (Aluminum)	1100	791959	Pivot-Rocker Arm Screw (Alternator)
967B	792303	Filter-Pre Cleaner	1027	696854	Filter-Oil (Premium) (Yellow)	1119	691183	Screw (Alternator)
968	795120	Cover-Air Cleaner (Black) ----- Note ----- 798584 Cover-Air Cleaner (Grey)	1029	690972	Arm-Rocker (Includes Reference 192)	1124	690988	Seal-O Ring (Fuel Transfer Tube)
975	798778	Bowl-Float/Solenoid	1035	691042	Shaft-Pump (Used Before Code Date 07022600).	1124A	841653	Seal-O Ring (Fuel Transfer Tube)
987	691000	Seal-Throttle Shaft	1036		Label-Emissions (Available from a Briggs and Stratton Authorized Dealer)	1126	690991	Screw (Fuel Transfer Tube)
1005	791236	Fan-Flywheel	1040	791237	Plate-Trim (Black) ----- Note ----- 798585 Plate-Trim (Orange)	1127	695407	Screw (Float Bowl)
1013	690954	Nipple-Oil Filter				1128	690990	Screw (Carburetor Nozzle)
1012	797926	Retainer-Link				1319	794467	Label-Warning
1017	690770	Screen-Oil Pump (Used Before Code Date 08071800).				1330	273521	Repair Manual
1017A	796214	Screen-Oil Pump (Used After Code Date 08071700).				1436	796918	Motor-Stepper
						1437	699891	Screw (Stepper/Bracket Motor)
						1438	796350S	Module-Electronic Choke Used on Type No(s). 0046, 0047, 0138, 0140, 0143, 1272, 1406. ----- Note ----- 796351S Module- Electronic Choke Used on Type No(s). 0128, 0129, 0141, 0147.
						1439	690365	Screw (Thermistor Bracket)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

