



589400

Illustrated Parts List

Model Series

589400
950cc
GAS


TYPE NUMBERS
0305, 0308, 0310,
0322, 0334.

REFER TO REPAIR MANUAL MS0750 FOR ASSEMBLY AND TORQUE REQUIREMENTS.

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON DAIHATSU LLC
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton DAIHATSU LLC.

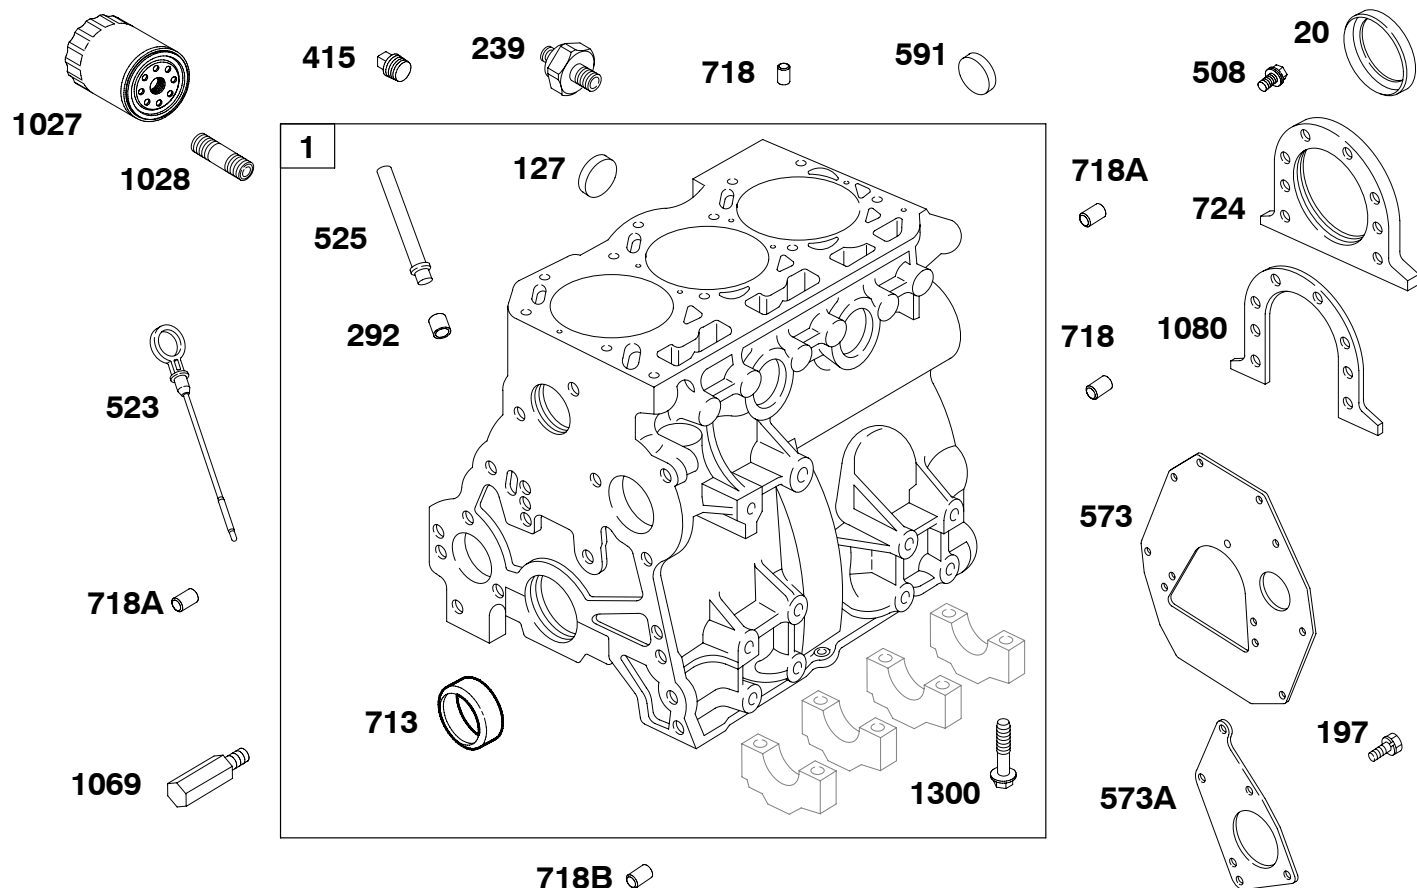

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	825595	Cylinder Assembly	523	821158	Dipstick	1027	491056	Filter-Oil
20	821073	Seal-Oil (PTO Side)	525	820144	Tube-Dipstick	1028	820050	Adapter-Oil Filter
127	820004	Plug-Welch	573	820170	Plate-Back	1069	820102	Nozzle-Oil
197	820176	Screw (Back Plate)	573A	820147	Plate-Back	1080	820145	Gasket-Seal Retainer
239	821135	Switch-Oil Pressure	591	821069	Plug-Camshaft	1300	820042	Screw (Crankshaft Bearing Cap)
292	820662	Collar-Dipstick Tube	713	821299	Bushing-Camshaft			
415	820051	Plug (Cylinder)	718	820063	Pin-Locating (Cylinder)			
508	820031	Screw (Seal Retainer)	718A	820062	Pin-Locating (Cylinder)			
			718B	820061	Pin-Locating (Cylinder)			
			724	820146	Retainer-Seal			

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095


Carburetor Overhaul Kit-Reference 121, 121A, 121B

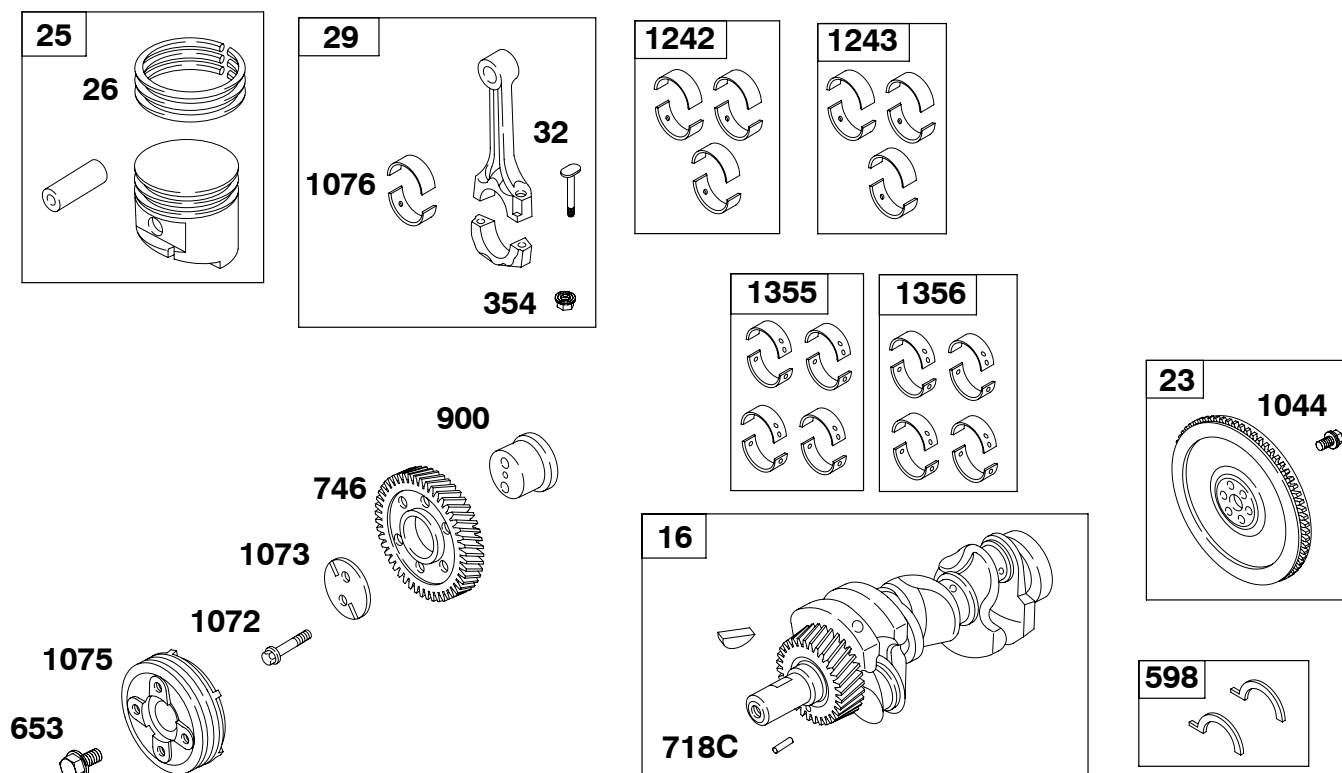

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	825552	Crankshaft	354	820073	Nut (Connecting Rod)	1044	820080	Screw (Flywheel)
23	825303	Flywheel	598	821295	Shim-Endplay (Crankshaft) (Standard)	1072	820081	Screw (Idle Gear Plate)
25	825641	Piston Assembly (Standard)			----- Note -----	1073	820117	Plate-Idle Gear
		----- Note -----			----- Note -----	1075	820236	Pulley-Crankshaft
		825643 Piston Assembly (.010" Oversize)			821297 Shim- Endplay (Crankshaft) (.010" Oversize)	1076	820142	Bearing/STD-Rod
26	825036	Ring Set	653	820079	Screw (Crankshaft Pulley)	1242	825019	Bearing Set/STD-Rod
		----- Note -----	718C	821033	Pin-Locating (Crankshaft)	1243	825060	Bearing Set/010-Rod
		825034 Ring Set (.010" Oversize)				1355	825040	Bearing Set/STD-Main
29	825033	Rod-Connecting				1356	825039	Bearing Set/010-Main
32	820128	Screw (Connecting Rod)	746	820611	Gear-Idler			
			900	820116	Shaft-Gear			






Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095

Carburetor Overhaul Kit-Reference 121, 121A, 121B

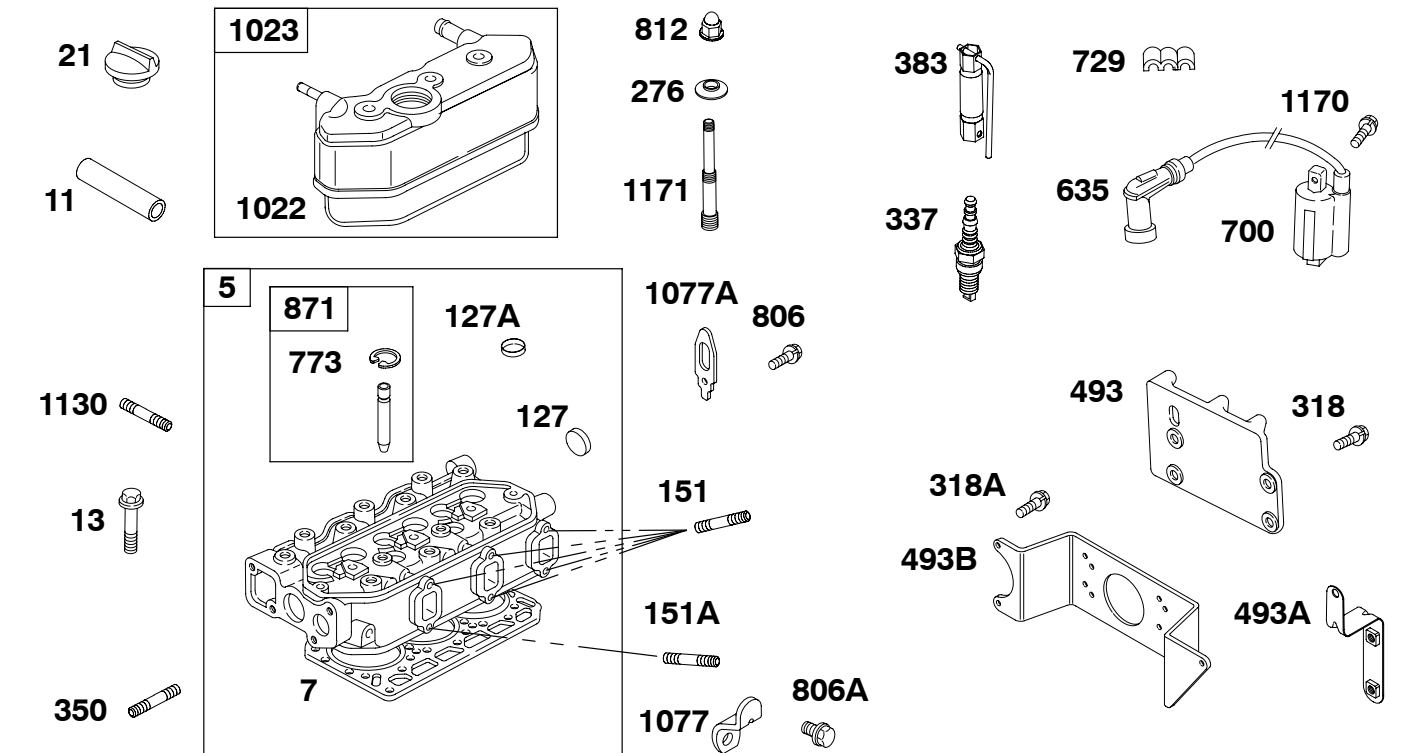[illegible]

Engine Gasket Set—Reference 358
Valve Gasket Set—Reference 1095


Carburetor Overhaul Kit—Reference 121, 121A, 121B

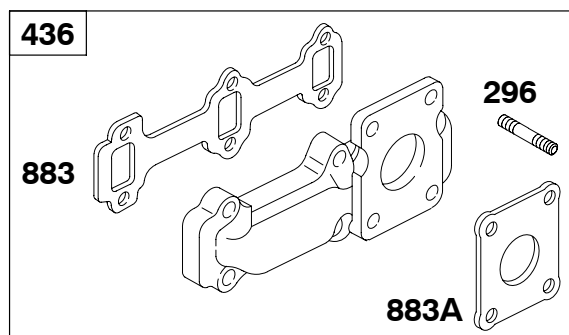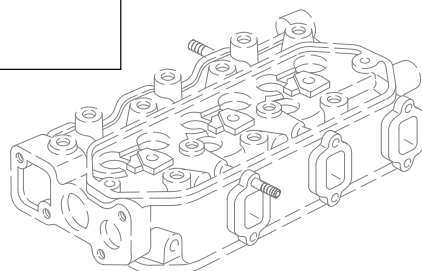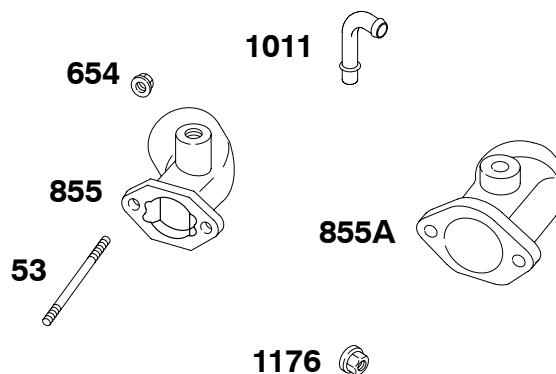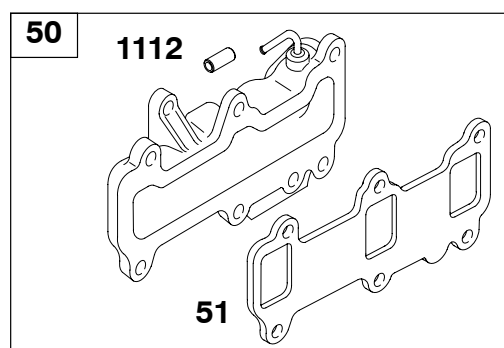54  1174 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	825261	Manifold-Intake	654	820011	Nut (Carburetor)	918	820393	Hose-Vacuum
51	820087	Gasket-Intake (Intake Manifold)	855	820921	Adapter-Air Cleaner (Perpendicular to Crankshaft)	1011	820184	Tube-Vent
53	820077	Stud (Carburetor)	855A	820578	Adapter-Air Cleaner (Parallel to Crankshaft)	1112	820543	Plug-Vent
54	820031	Screw (Intake Manifold)	883	820817	Gasket-Exhaust (Exhaust Manifold)	1174	820069	Nut (Intake Manifold)
296	820553	Stud (Muffler)	883A	821001	Gasket-Exhaust (Muffler)	1176	820010	Nut (Exhaust Manifold)
436	825055	Manifold-Exhaust						

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095

Carburetor Overhaul Kit-Reference 121, 121A, 121B

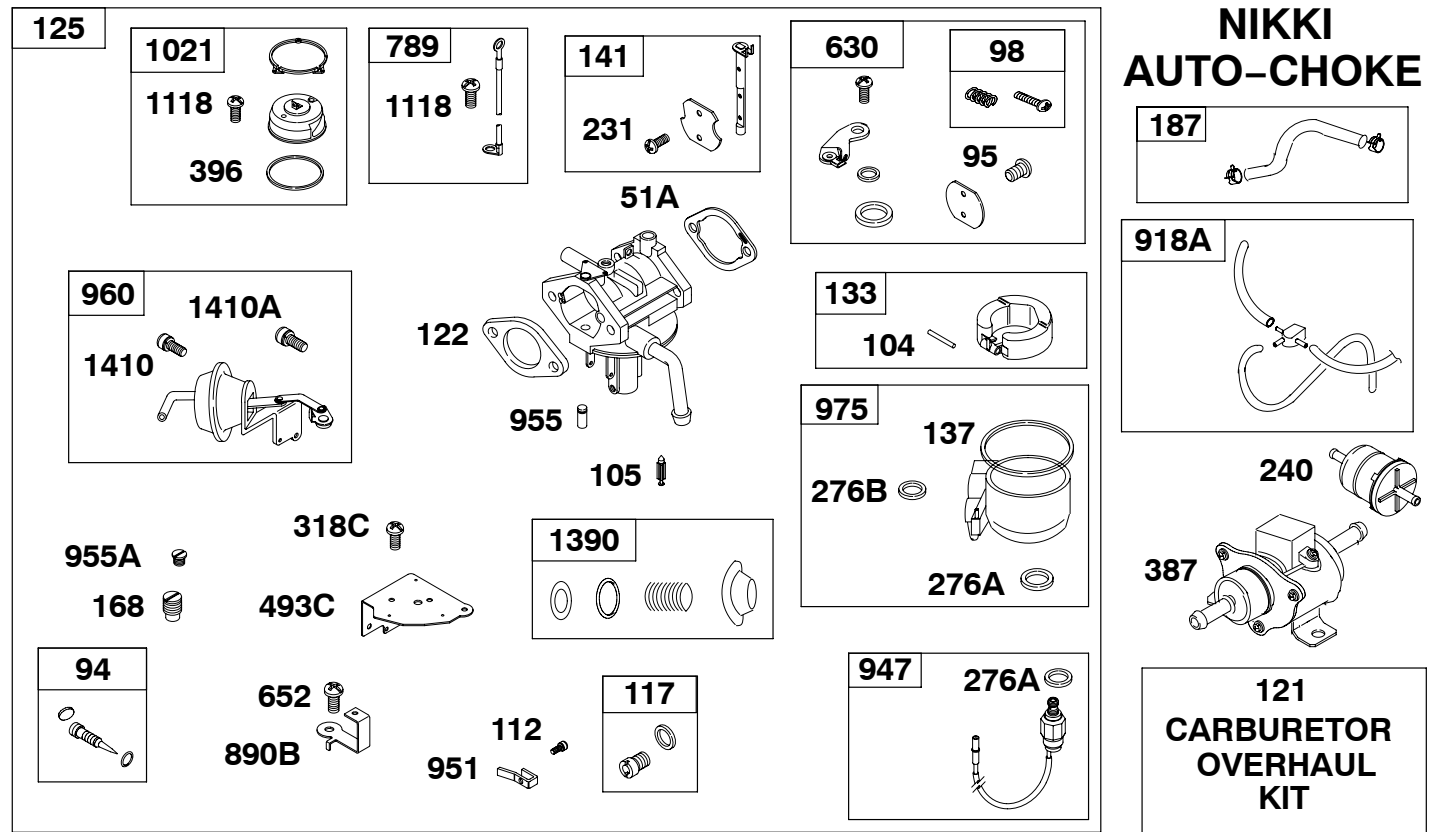





REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51A	820385	Gasket-Intake	168	820603	Jet-Idle Circuit	789	825257	Harness-Wiring
94	825374	Kit-Idle Mixture	187	825663	Line-Fuel	890B	820517	Bracket-Support
95	820504	Screw (Throttle Valve)	231	820504	Screw (Choke Valve)	918A	825665	Hose-Vacuum
98	825616	Kit-Idle Speed (Spring, 10.6 mm)	240	821026	Filter-Fuel	947	825679	Solenoid-Fuel
104	693506	Pin-Float Hinge	276A	820511	Washer-Sealing (Float Bowl)	951	820509	Lever-Choke
105	820506	Valve-Float Needle	276B	821185	Washer-Sealing (Float Bowl)	955	820510	Plug-Carburetor (Slow Passage)
112	690718	Screw (Choke Lever)	318C	820512	Screw (Mounting Bracket)	955A	820520	Plug-Carburetor (Jet)
117	825667	Jet-Main (Standard)	387	825232	Pump-Fuel	960	825253	Choke-Vacuum Break
121	825293	Kit-Carburetor Overhaul	396	820515	Gasket-Choke Cover	975	825669	Bowl-Float
122	820082	Spacer-Carburetor	493C	820516	Bracket-Mounting	1021	825252	Activator-Choke
125	825659	Carburetor Used on Type No(s). 0308.	630	825666	Lever/Plate-Throttle (To Replace Throttle Shaft, Order Corresponding Carburetor)	1118	690718	Screw (Choke Activator)
133	825248	Float-Carburetor	652	820514	Screw (Support Bracket)	1390	825670	Pump Kit-Acceleration
137	820508	Gasket-Float Bowl				1410	820512	Screw (Vacuum Break Choke)
141	825664	Kit-Choke Shaft				1410A	820513	Screw (Vacuum Break Choke)

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095

Carburetor Overhaul Kit-Reference 121, 121A, 121B

AISAN MANUAL CHOKE

121A CARBURETOR OVERHAUL KIT

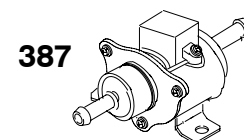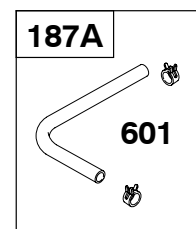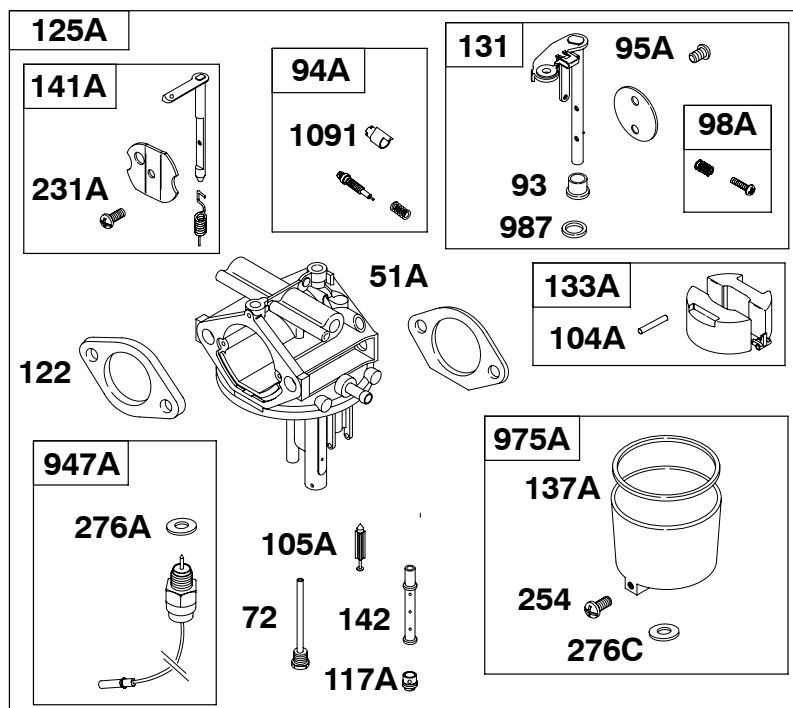


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51A	820385	Gasket-Intake	121A	825575	Kit-Carburetor Overhaul	387	825232	Pump-Fuel
72	820626	Tube-Jet				601	820006	Clamp-Hose
93		Bushing-Throttle Shaft (Sold In Kit Only)	122	820082	Spacer-Carburetor	947A	825377	Solenoid-Fuel
94A	825241	Kit-Idle Mixture	125A	825569	Carburetor Used on Type No(s). 0305, 0310, 0322.	975A	825239	Bowl-Float
95A	820485	Screw (Throttle Valve)	131	825570	Kit-Throttle Shaft	987	690734	Seal-Throttle Shaft
98A	825242	Kit-Idle Speed	133A	825240	Float-Carburetor	1091	691515	Cap-Limiter
104A	690739	Pin-Float Hinge	137A	820489	Gasket-Float Bowl			
105A	820486	Valve-Needle Valve	141A	825298	Kit-Choke Shaft			
117A	821049	Jet-Main (Standard)	142	821051	Nozzle-Carburetor			
118	821056	Jet-Main (High Altitude) (2,400 to 6,600 Feet) ----- Note ----- 820457 Jet-Main (High Altitude) (6,000 to 10,000 Feet)	187A	825044	Line-Fuel			
			231A	820485	Screw (Choke Valve)			
			240	821026	Filter-Fuel			
			254	820491	Drain-Carburetor Bowl			
			276C	692343	Washer-Sealing (Float Bowl)			

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095

Carburetor Overhaul Kit-Reference 121, 121A, 121B

NIKKI MANUAL CHOKE

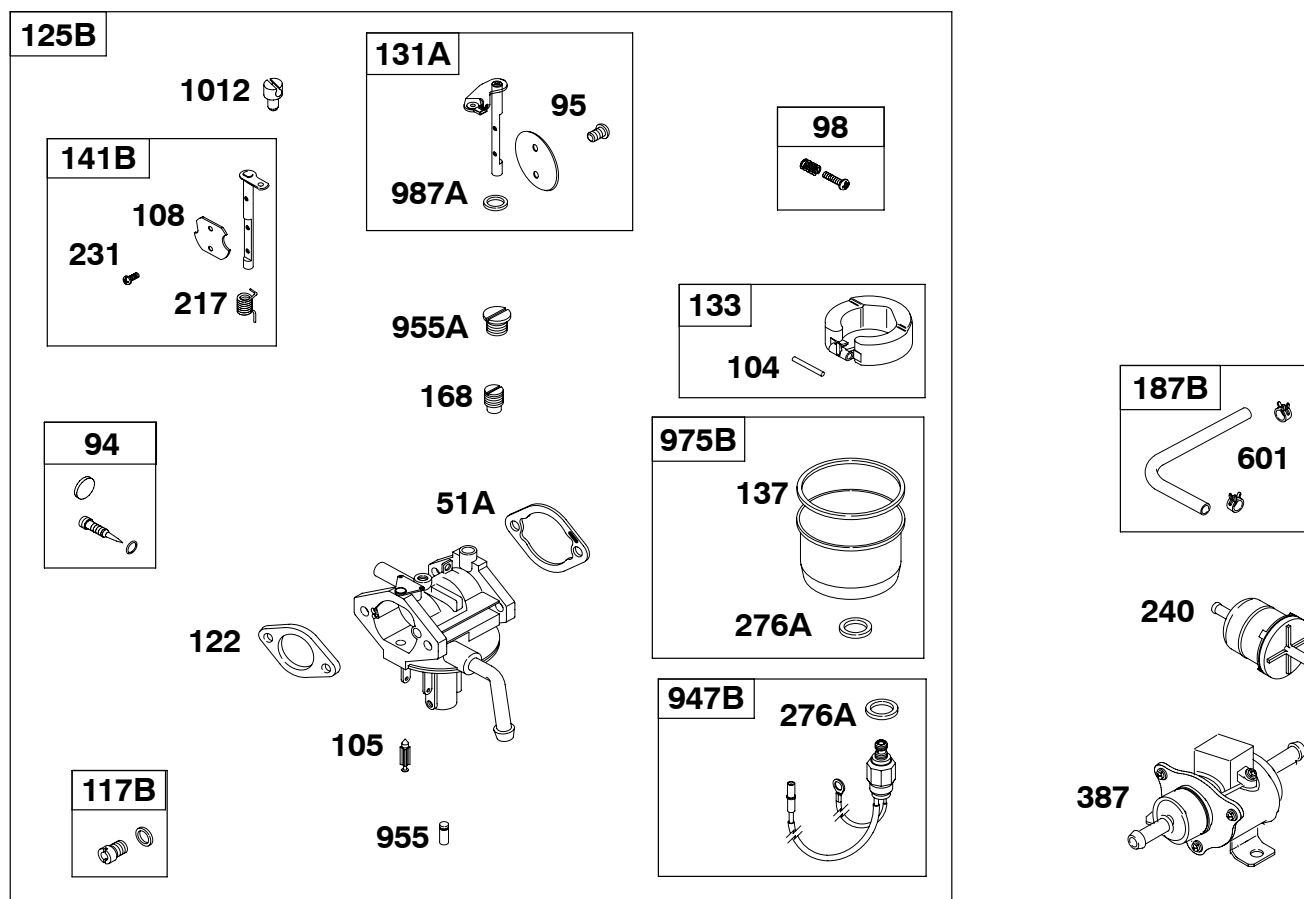


121B CARBURETOR OVERHAUL KIT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51A	820385	Gasket-Intake	125B	825656	Carburetor	240	821026	Filter-Fuel
94	825374	Kit-Idle Mixture			Used on Type No(s). 0334.	276A	820511	Washer-Sealing (Float Bowl)
95	820504	Screw (Throttle Valve)	131A	825559	Kit-Throttle Shaft	387	825232	Pump-Fuel
98	825616	Kit-Idle Speed (Spring, 10.6 mm)	133	825248	Float-Carburetor	601	820006	Clamp-Hose
104	693506	Pin-Float Hinge	137	820508	Gasket-Float Bowl	947B	825677	Solenoid-Fuel
105	820506	Valve-Float Needle	141B	825375	Kit-Choke Shaft	955	820510	Plug-Carburetor (Slow Passage)
108		Valve-Choke (Sold In Kit Only)	168	820603	Jet-Idle Circuit	955A	820520	Plug-Carburetor (Jet)
117B	825668	Jet-Main (Standard)	187B	791766	Line-Fuel (Cut to Required Length)	975B	825247	Bowl-Float
121B	825441	Kit-Carburetor Overhaul	217		Spring-Choke Return (Sold In Kit Only)	987A		Seal-Throttle Shaft (Sold In Kit Only)
122	820082	Spacer-Carburetor	231	820504	Screw (Choke Valve)	1012	821235	Retainer-Link

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095


Carburetor Overhaul Kit-Reference 121, 121A, 121B

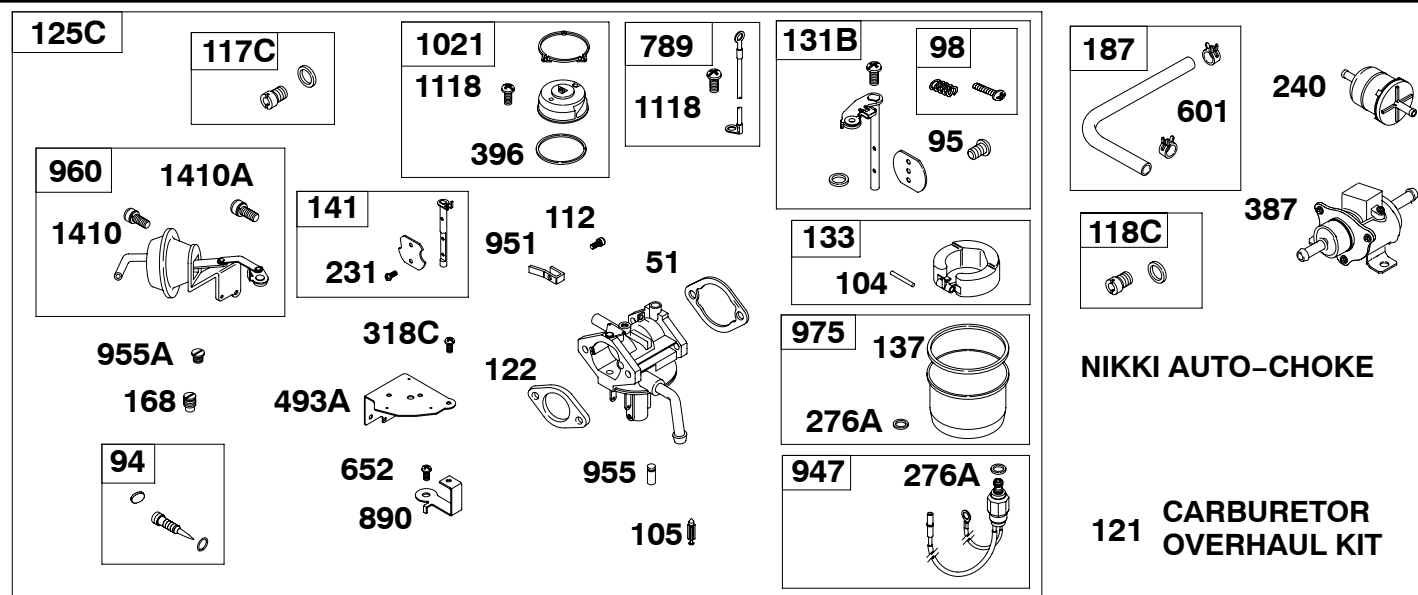

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51A	820385	Gasket-Intake			825587 Jet-Main (High Altitude) (6,000 to 10,000 Feet) (Used Before Code Date 05070100).	168	820603	Jet-Idle Circuit
94	825374	Kit-Idle Mixture				187A	825044	Line-Fuel
95	820504	Screw (Throttle Valve)				231	820504	Screw (Choke Valve)
98	825616	Kit-Idle Speed				240	821026	Filter-Fuel
104	693506	Pin-Float Hinge				276A	820511	Washer-Sealing
105	820506	Valve-Float Needle				318C	820512	Screw (Mounting Bracket)
112	690718	Screw (Choke Lever)				387	825232	Pump-Fuel
117C	825711	Jet-Main (Standard) (Used After Code Date 05063000).	121	825293	Kit-Carburetor Overhaul	396	820515	Gasket-Choke Cover
		----- Note -----	122	820082	Spacer-Carburetor	493C	820516	Bracket-Mounting (Carburetor)
		825563 Jet-Main (Standard) (Used Before Code Date 05070100).	125C	825709	Carburetor (Used After Code Date 05063000).	601	820006	Clamp-Hose
		----- Note -----			----- Note -----	652	820514	Screw (Support Bracket)
		825586 Jet-Main (High Altitude) (2,400 to 6,600 Feet) (Used Before Code Date 05070100).	131B	825714	Kit-Throttle Shaft (Used After Code Date 05063000).	789	825257	Harness-Wiring
		----- Note -----			----- Note -----	890B	820517	Bracket-Support
118C	825712	Jet-Main (High Altitude) (2,400 to 6,600 Feet) (Used After Code Date 05063000).			825559 Kit-Throttle Shaft (Used Before Code Date 05070100).	947B	825677	Solenoid-Fuel
		----- Note -----			825528 Float-Carburetor	951	820509	Lever-Choke
		825586 Jet-Main (High Altitude) (2,400 to 6,600 Feet) (Used Before Code Date 05070100).	133	825248	Float-Carburetor	955	820510	Plug-Carburetor (Slow Passage)
		----- Note -----	137	820508	Gasket-Float Bowl	955A	820520	Plug-Carburetor (Jet)
		825713 Jet-Main (High Altitude) (6,000 to 10,000 Feet) (Used After Code Date 05063000).	141	825664	Kit-Choke Shaft (Used After Code Date 05063000).	960	825253	Choke-Vacuum Break
		----- Note -----			----- Note -----	975B	825247	Bowl-Float
		825562 Kit-Choke Shaft (Used Before Code Date 05070100).			825522 Activator-Choke	1021	825252	Activator-Choke
					690718 Screw (Choke Activator)	1118	690718	Screw (Choke Activator)
					820512 Screw (Mounting Bracket)	1410	820512	Screw (Mounting Bracket)
					820513 Screw (Mounting Bracket)	1410A	820513	Screw (Mounting Bracket)

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095


Carburetor Overhaul Kit-Reference 121, 121A, 121B

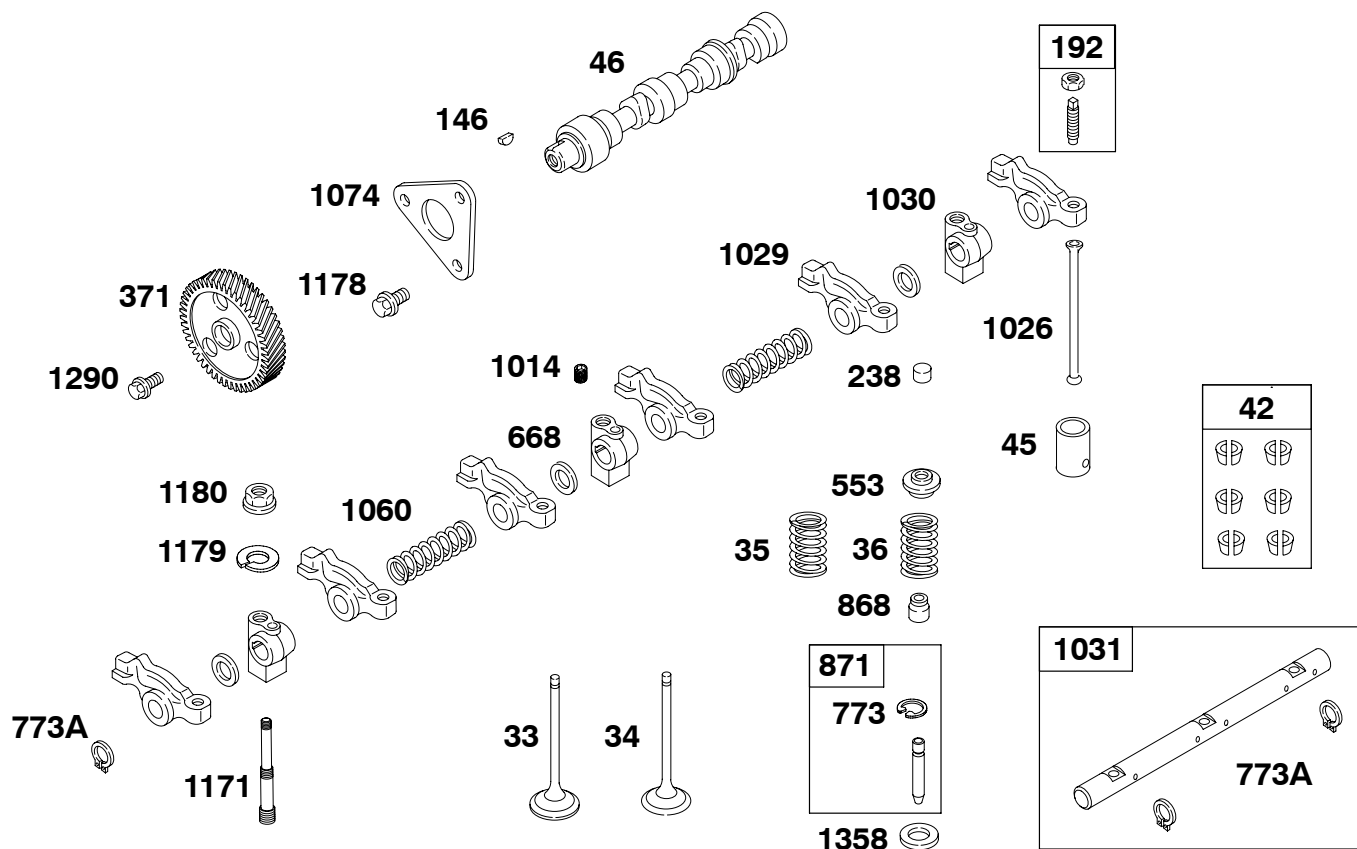

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
33	820114	Valve-Exhaust	238	821214	Cap-Valve (Used After Code Date 04083100). ----- Note ----- 820113 Cap-Valve (Used Before Code Date 04090100).	1026	821218	Rod-Push (Used After Code Date 04083100). ----- Note ----- 820422 Rod-Push (Used Before Code Date 04090100).
34	820115	Valve-Intake				1029	820387	Arm-Rocker
35	820406	Spring-Valve (Intake)	371	820613	Gear-Cam	1030	820106	Support-Rocker Arm
36	820406	Spring-Valve (Exhaust)	553	820111	Retainer-Valve Spring	1031	825093	Shaft-Rocker Arm
42	825082	Keeper-Valve	668	820065	Spacer (Rocker Arm Shaft)	1060	820044	Spring-Rocker Shaft
45	820110	Tappet-Valve	773	820130	Retainer (Valve Guide Bushing)	1074	820118	Retainer-Camshaft
46	820388	Camshaft	773A	820003	Retainer (Rocker Arm Shaft)	1171	820076	Stud (Rocker Cover)
146	691639	Key-Timing	868	820041	Seal-Valve	1178	820032	Screw (Camshaft Retainer)
192	825688	Adjuster-Rocker Arm (Used After Code Date 04083100). ----- Note ----- 825041 Adjuster-Rocker Arm (Used Before Code Date 04090100).	871	825030	Bushing-Valve Guide	1179	820177	Washer (Rocker Arm Support)
			1014	820105	Screw (Rocker Arm Support)	1180	820070	Nut (Rocker Arm Support)
						1290	820075	Screw (Cam Gear)
						1358	820112	Retainer-Valve Spring

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095


Carburetor Overhaul Kit-Reference 121, 121A, 121B

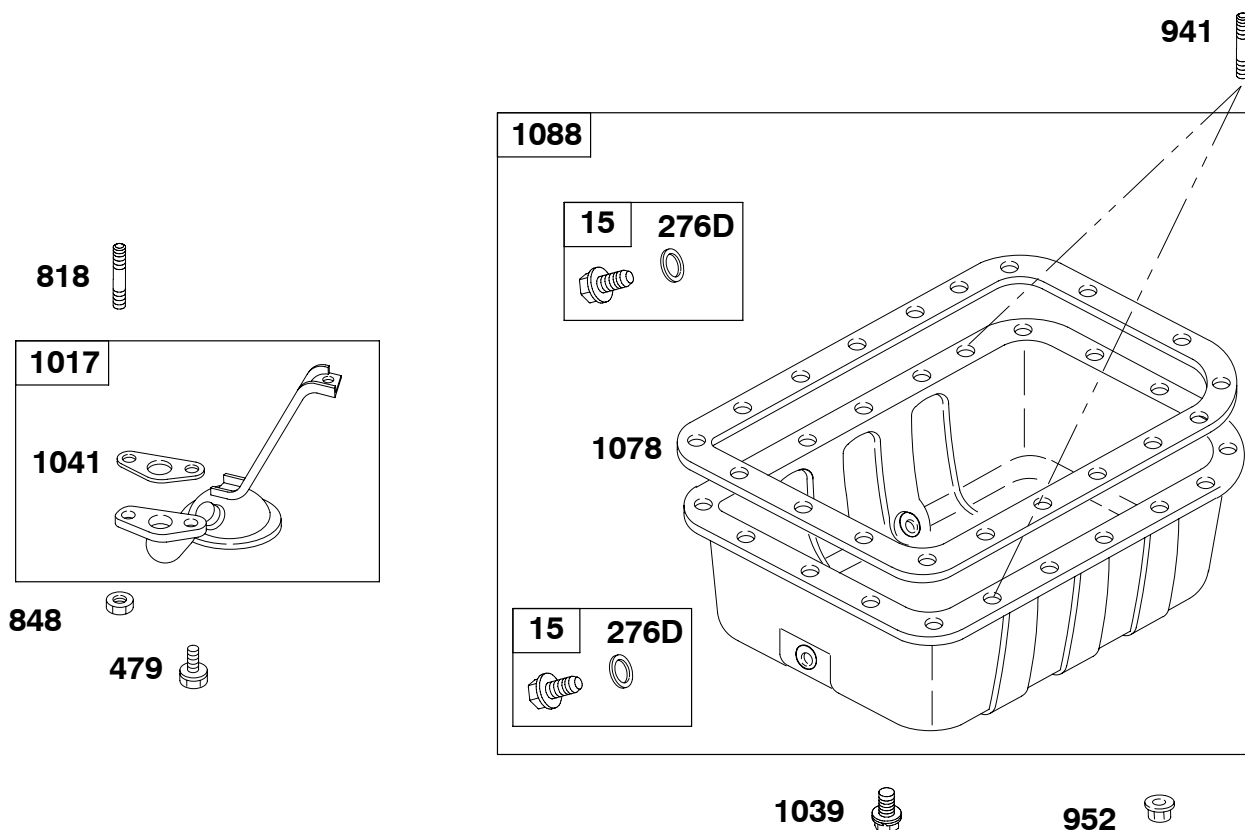

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
15	825278	Plug–Oil Drain	941	820017	Stud (Oil Pan)	1041	820104	Gasket–Oil Pump Screen
276D	820582	Washer–Sealing (Oil Drain Plug)	952	820068	Nut (Oil Pan)	1078	820137	Gasket–Oil Pan
479	820034	Screw (Oil Pump Screen)	1017	825089	Screen–Oil Pump	1088	825285	Pan–Oil (Dual Drain)
818	820016	Stud (Oil Pump Screen)	1039	820034	Screw (Oil Pan)			
848	820069	Nut (Oil Pump Screen)						

Engine Gasket Set–Reference 358
Valve Gasket Set–Reference 1095


Carburetor Overhaul Kit–Reference 121, 121A, 121B

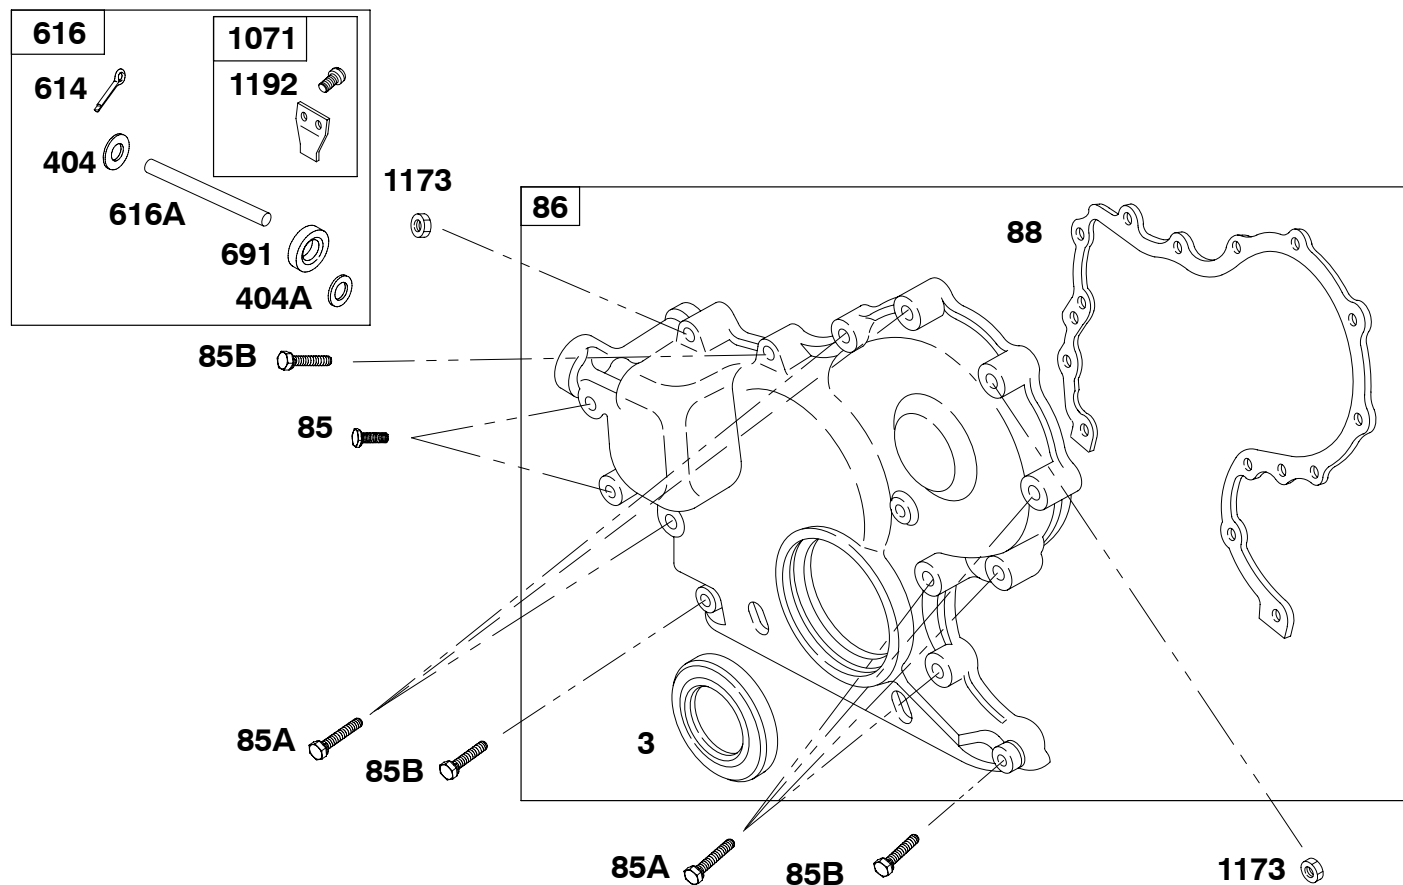

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	821071	Seal–Oil (Magneto Side)	86	825046	Cover–Gear	691	820054	Seal–Governor Shaft
85	820026	Screw (Gear Cover to Gear Reduction Case)	88	820148	Gasket–Gear Reduction Cover	1071	825086	Paddle–Governor
85A	820029	Screw (Gear Cover to Gear Reduction Case)	404	820167	Washer (Governor Crank)	1173	820069	Nut (Gear Cover)
85B	820027	Screw (Gear Cover to Gear Reduction Case)	404A	820169	Washer (Governor Crank)	1192	820166	Screw (Governor Paddle)
			614	820168	Pin–Cotter			
			616	825087	Crank–Governor			
			616A	820165	Crank–Governor (Shaft)			

Engine Gasket Set–Reference 358
Valve Gasket Set–Reference 1095


Carburetor Overhaul Kit–Reference 121, 121A, 121B

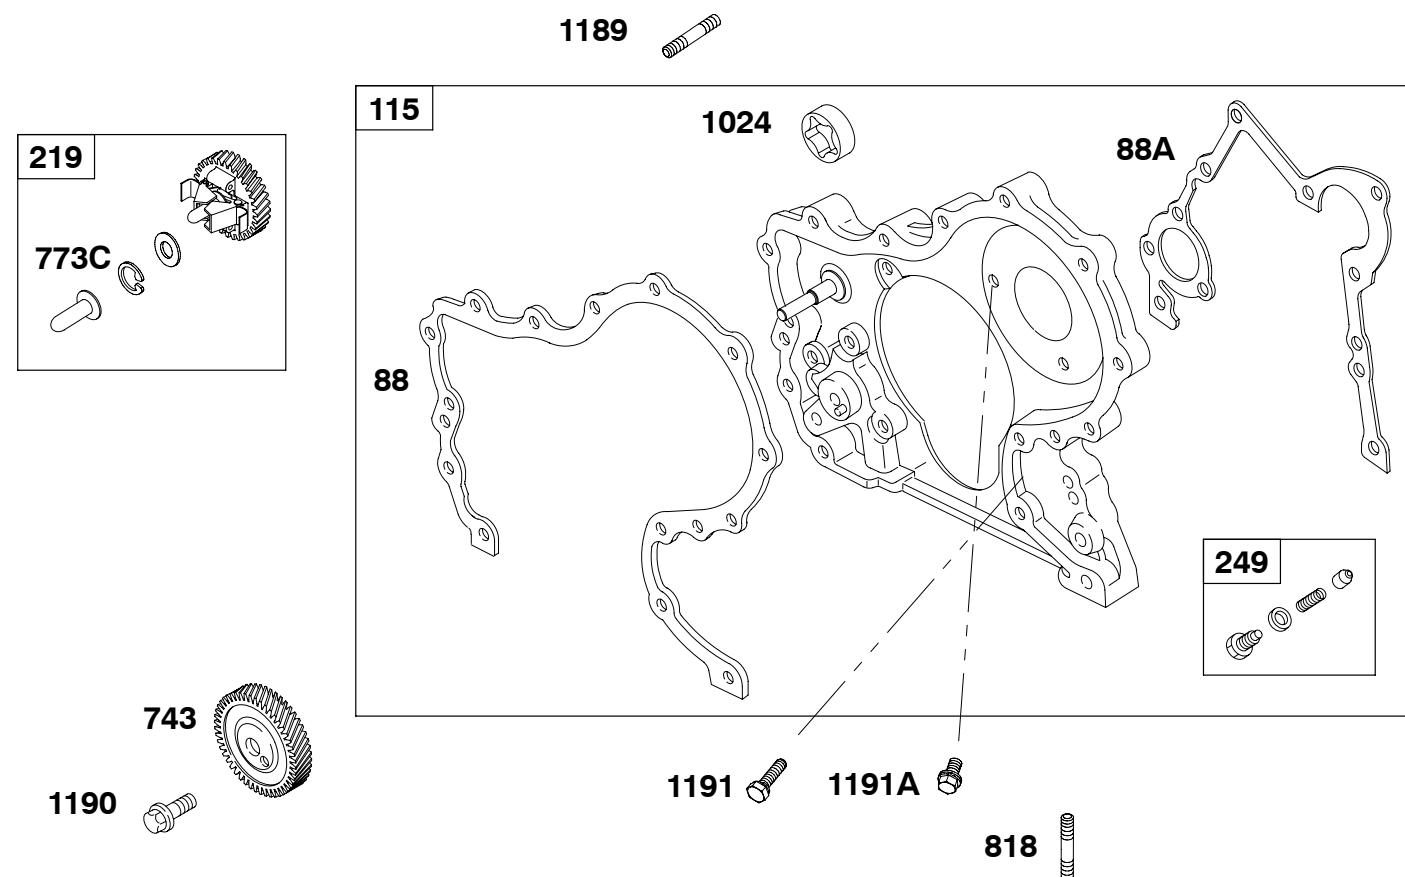

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
88	820148	Gasket-Gear Reduction Cover	743	820615	Gear-Drive (Gear Housing)	1189	820156	Stud (Gear Housing)
88A	820155	Gasket-Gear Reduction Cover	773C	820163	Retainer (Governor Gear)	1190	820180	Screw (Drive Gear)
115	825059	Housing-Gear	818	820016	Stud (Oil Pump Screen)	1191	820030	Screw (Gear Housing)
219	825331	Gear-Governor	1024		Pump-Oil (Sold in Gear Housing Only, Reference 115)	1191A	820033	Screw (Gear Housing)
249	825032	Valve-Pressure Relief						

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095


Carburetor Overhaul Kit-Reference 121, 121A, 121B

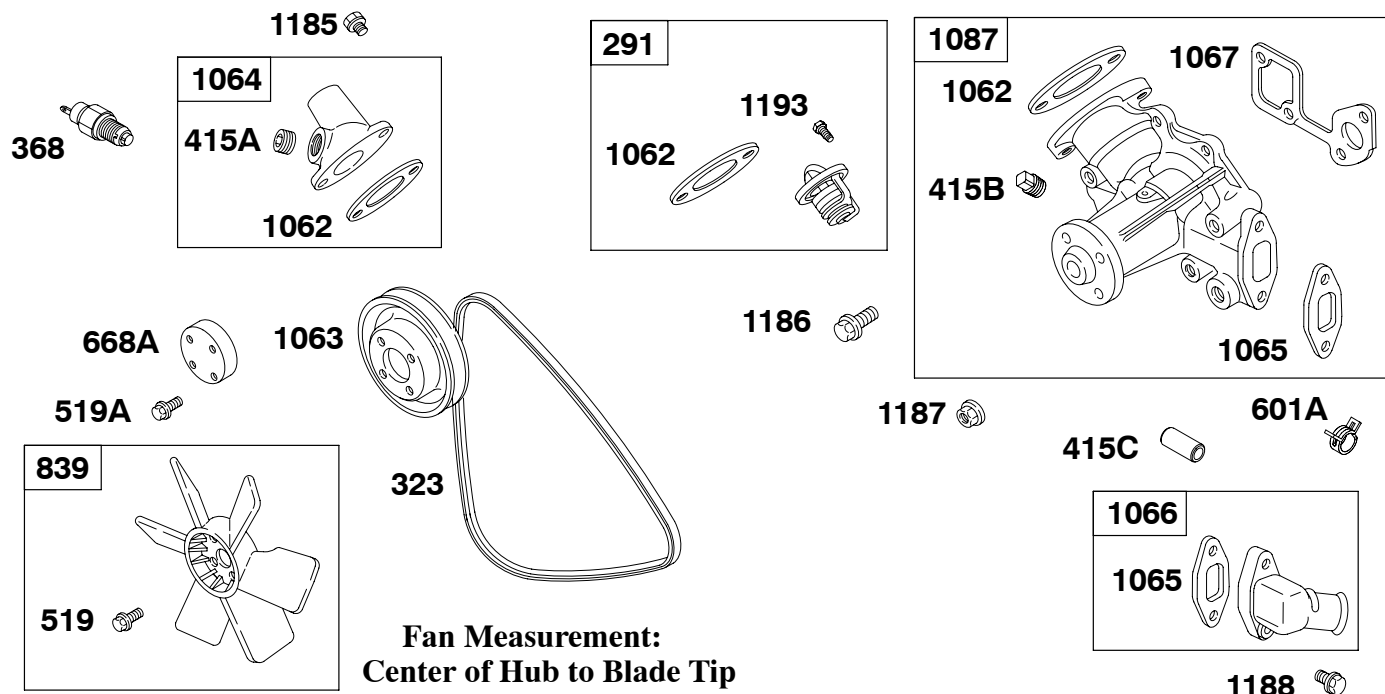

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
291	825064	Thermostat	601A	821031	Clamp-Hose	1185	820031	Screw (Outlet Housing)
323	821075	Belt-Vee (940 mm)	668A	820218	Spacer (Radiator Fan) Used on Type No(s). 0310.	1186	820022	Screw (Water Pump)
368	820208	Switch-Water Temperature	839	825454	Fan-Radiator (320 mm Less Spacer) Used on Type No(s). 0305, 0308, 0322, 0334.	1187	820181	Nut (Water Pump)
415A	820052	Plug (Outlet Housing)	1062	820093	Gasket-Outlet Housing	1188	820031	Screw (Inlet Housing)
415B	820182	Plug (Water Pump)	1063	820095	Pump-Pulley	1193	820185	Screw (Thermostat)
415C	821017	Plug (Water Pump)	1064	825074	Housing-Outlet			
519	820034	Screw (Radiator Fan)	1065	820098	Gasket-Inlet Housing			
519A	820030	Screw (Radiator Fan) Used on Type No(s). 0310.	1066	825051	Housing-Inlet			
			1067	820100	Gasket-Water Pump			
			1087	825275	Pump-Water			

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095


Carburetor Overhaul Kit-Reference 121, 121A, 121B

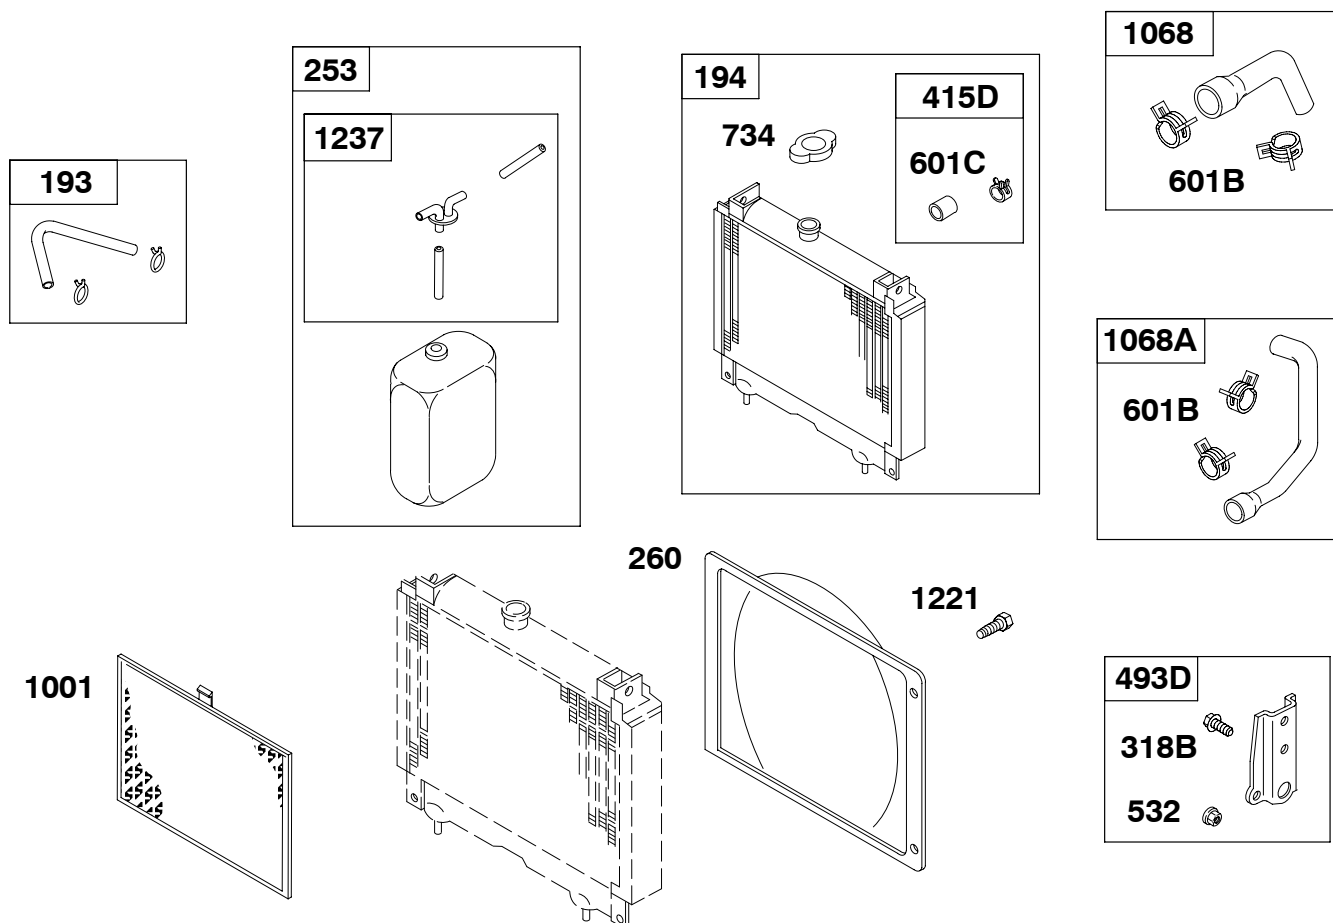

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
193	825697	Hose-Reserve Tank	318B	820034	Screw (Mounting Bracket)	1068	825557	Hose/Clamp Assembly Used on Type No(s). 0322.
194	825645	Radiator (Aluminum) Used on Type No(s). 0322.	415D	825075	Plug (Radiator)			----- Note -----
		----- Note -----	493D	825106	Bracket-Mounting			825134 Hose/Clamp Assembly Used on Type No(s). 0310.
		825574 Radiator (Aluminum) Used on Type No(s). 0310, 0334.	532	820011	Nut (Mounting Bracket)	1068A	825133	Hose/Clamp Assembly Used on Type No(s). 0310, 0322.
253	825462	Tank-Reserve	601B	820256	Clamp-Hose			----- Note -----
260	821019	Shroud-Fan Used on Type No(s). 0322.	601C	820201	Clamp-Hose			820865 Screw (Fan Shroud) Used on Type No(s). 0310, 0322.
		----- Note -----	734	820258	Cap-Radiator			Used on Type No(s). 0334.
		820220 Shroud-Fan Used on Type No(s). 0310.	1001	821047	Screen-Radiator Used on Type No(s). 0322.	1237	825461	Cap/Hose-Reserve
		820863 Shroud-Fan Used on Type No(s). 0334.						

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095











Carburetor Overhaul Kit-Reference 121, 121A, 121B

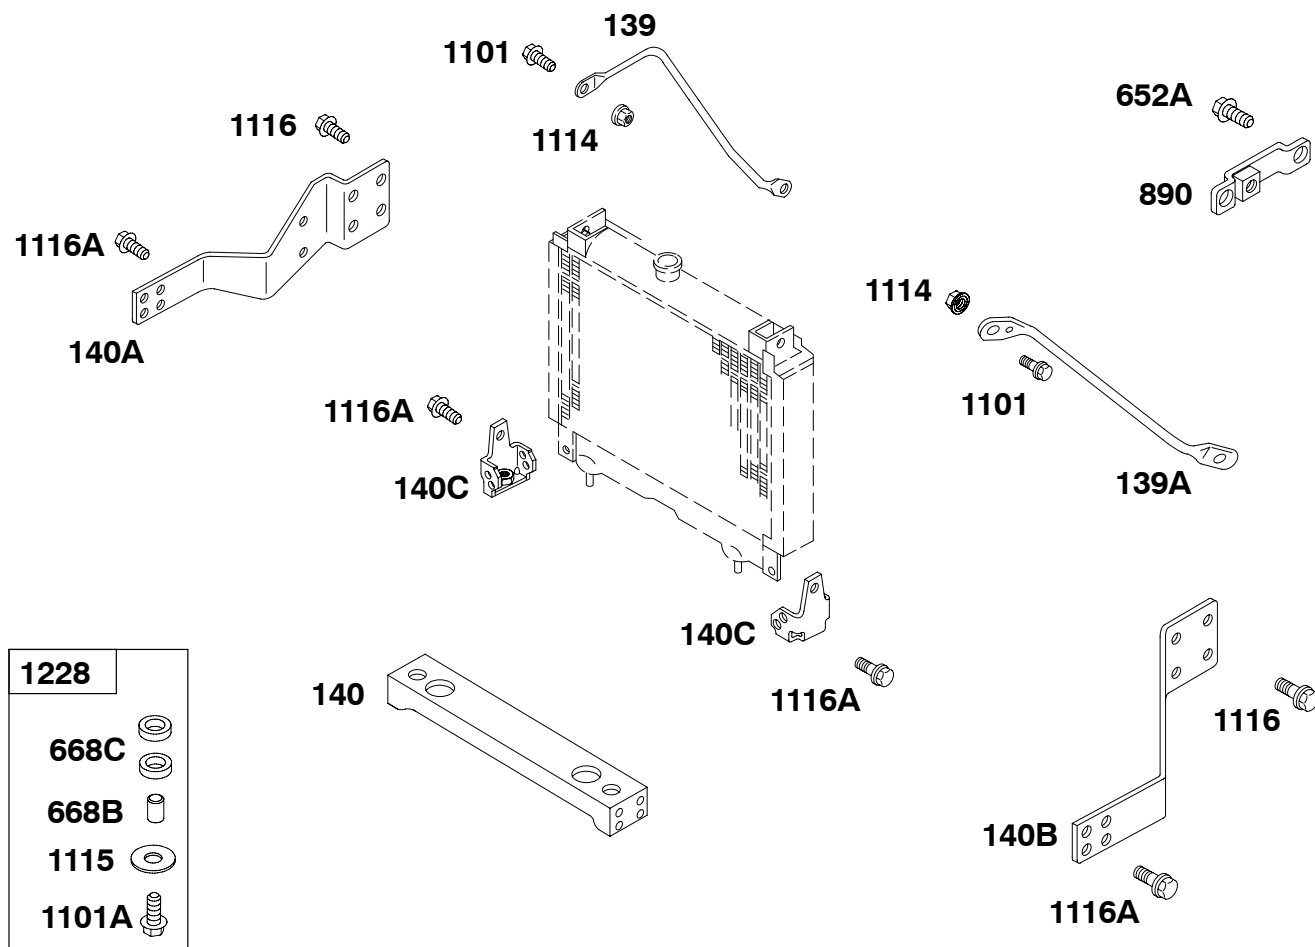

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
139	820190	Support-Radiator (Right Hand)	652A	820452	Screw (Support Bracket)	1114	820070	Nut (Radiator Support)
139A	821043	Support-Radiator (Left Hand)	668B	820307	Spacer (Radiator Mount)	1115	820296	Washer (Radiator Support)
		Used on Type No(s). 0322.	668C	820198	Spacer (Radiator Mount)	1116	820023	Screw (Radiator Bracket)
		----- Note -----	890	820194	Bracket-Support (Radiator)	1116A	820878	Screw (Radiator Bracket)
		820191 Support-Radiator (Left Hand)	1101	820272	Screw (Radiator Support)	1228	825135	Mount-Radiator
		Used on Type No(s). 0334.	1101A	820309	Screw (Radiator Support)			
140	820255	Bracket-Radiator (Front)						
140A	820192	Bracket-Radiator (Right Hand)						
140B	820193	Bracket-Radiator (Left Hand)						
140C	821039	Bracket-Radiator						

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095

Carburetor Overhaul Kit-Reference 121, 121A, 121B

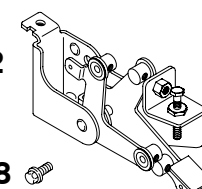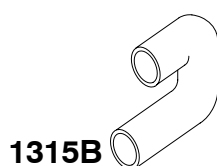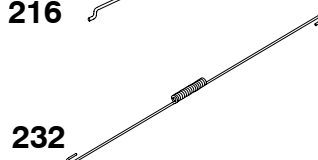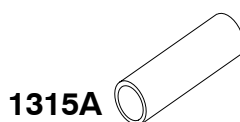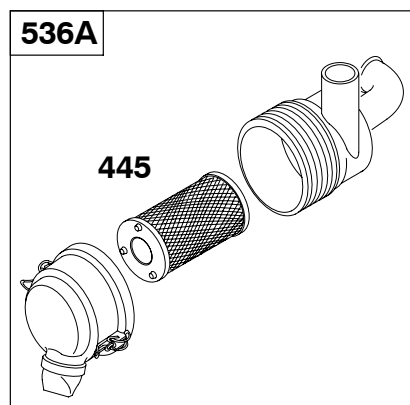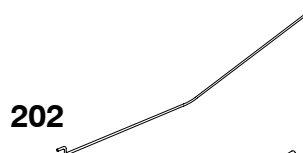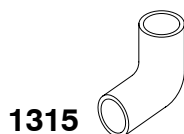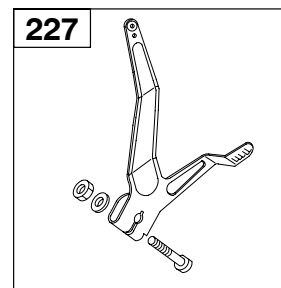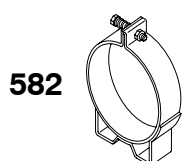
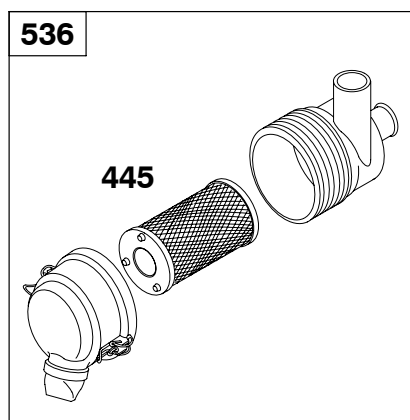


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	820878	Screw (Control Bracket)	232	820172	Spring-Governor Link	582	820230	Clamp-Air Cleaner
202	820171	Link-Mechanical Governor	265	691024	Clamp-Casing	1315	820554	Hose-Air Cleaner
209	821054	Spring-Governor (Yellow, 32 Coil)	267	692083	Screw (Casing Clamp)	1315A	820555	Hose-Air Cleaner
216	820173	Link-Choke	445	820263	Filter-Air Cleaner Cartridge	1315B	820556	Hose-Air Cleaner
222	825062	Bracket-Control	536	825117	Cleaner-Air (With Vacuum Adaptor)			
227	825061	Lever-Governor Control	536A	825118	Cleaner-Air (90 Degree Elbow With Vacuum Adaptor)			

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095

Carburetor Overhaul Kit-Reference 121, 121A, 121B

589400

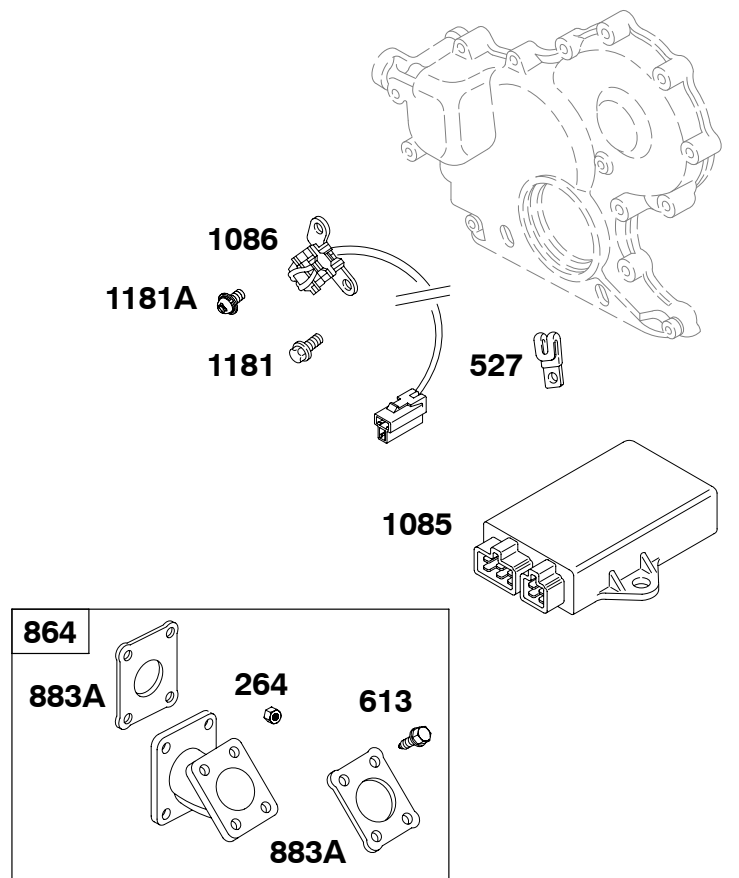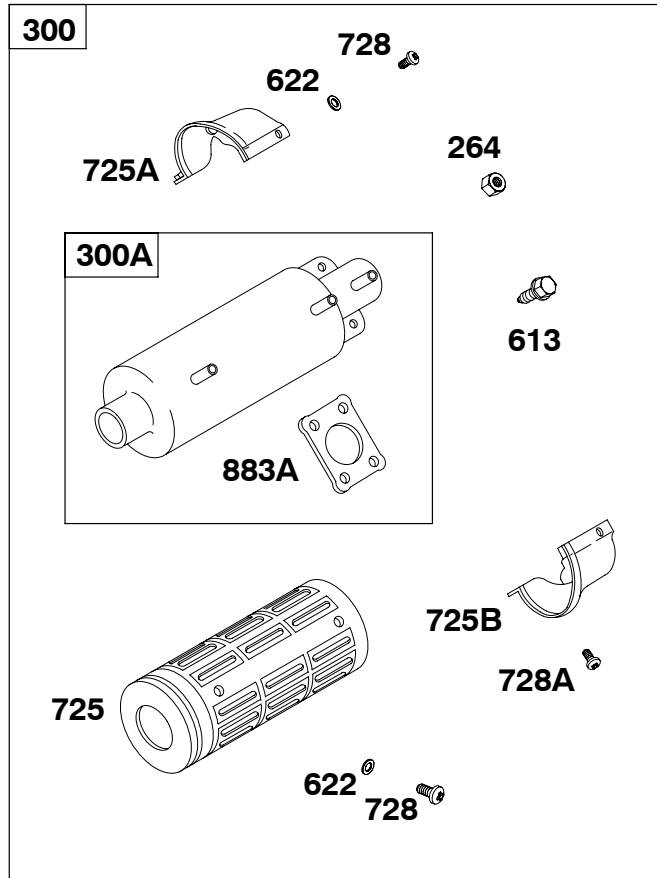


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
264	820178	Nut (Muffler Adapter)	725	820628	Shield-Heat	883A	821001	Gasket-Exhaust (Muffler)
300	825200	Muffler	725A	820630	Shield-Heat	1085	825548	Module-Ignition
300A	825550	Muffler	725B	820629	Shield-Heat	1086	825009	Trigger-Ignition
613	820023	Screw (Muffler)	728	821011	Screw (Heat Shield)	1181	820029	Screw (Ignition Trigger)
622	820631	Washer (Heat Shield)	728A	820431	Screw (Heat Shield)	1181A	820013	Screw (Ignition Trigger)
			527	820047	Clamp-Tube			
			864	825358	Adapter-Muffler			

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095

Carburetor Overhaul Kit-Reference 121, 121A, 121B

0.8 KW

RED LABEL

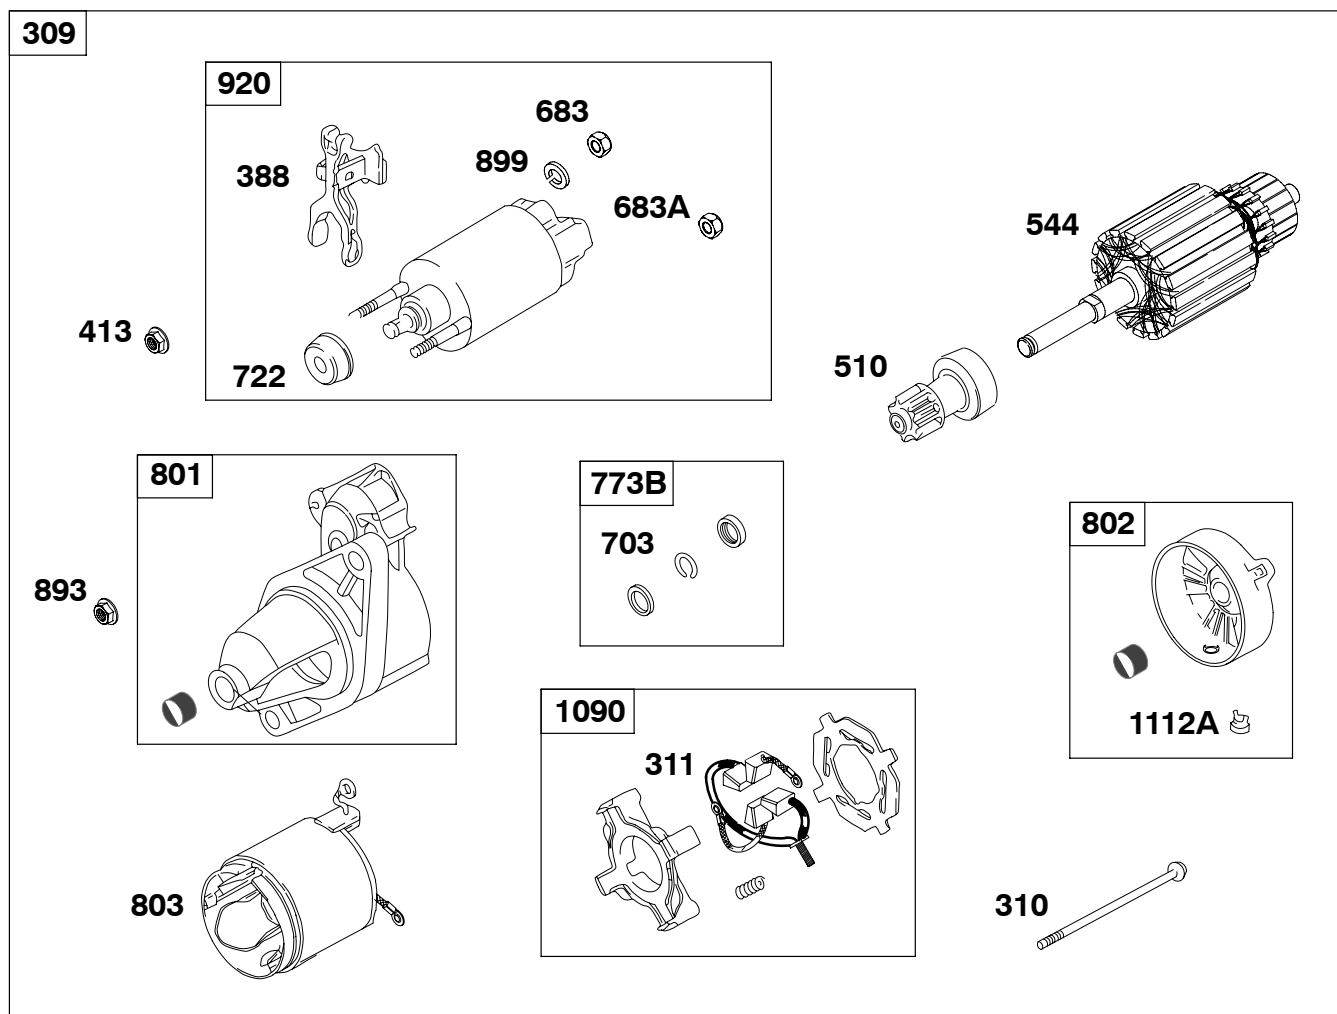


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	825095	Motor-Starter	683	820813	Nut (Starter Solenoid) (Terminal)	893	820805	Nut (Starter Solenoid)
310	820807	Bolt (Starter Motor)	683A	820809	Nut (Starter Solenoid) (Terminal)	899	820811	Washer (Starter Solenoid) (Terminal)
311	825411	Brush Set	703	820803	Clip	920	825418	Solenoid-Starter
388	820799	Lever-Pinion Drive	722	820801	Seal-Plunger	1090	825412	Retainer-Brush
413	820067	Nut (Starter Motor)	773B	825420	Retainer (Starter Drive)	1112A	820797	Plug-Vent (End Cap)
510	820789	Drive-Starter	801	820791	Cap-Drive			
544	825414	Armature-Starter	802	825416	Cap-End			
			803	820783	Housing-Starter (Includes Brush Set)			

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095

Carburetor Overhaul Kit-Reference 121, 121A, 121B


40 AMP

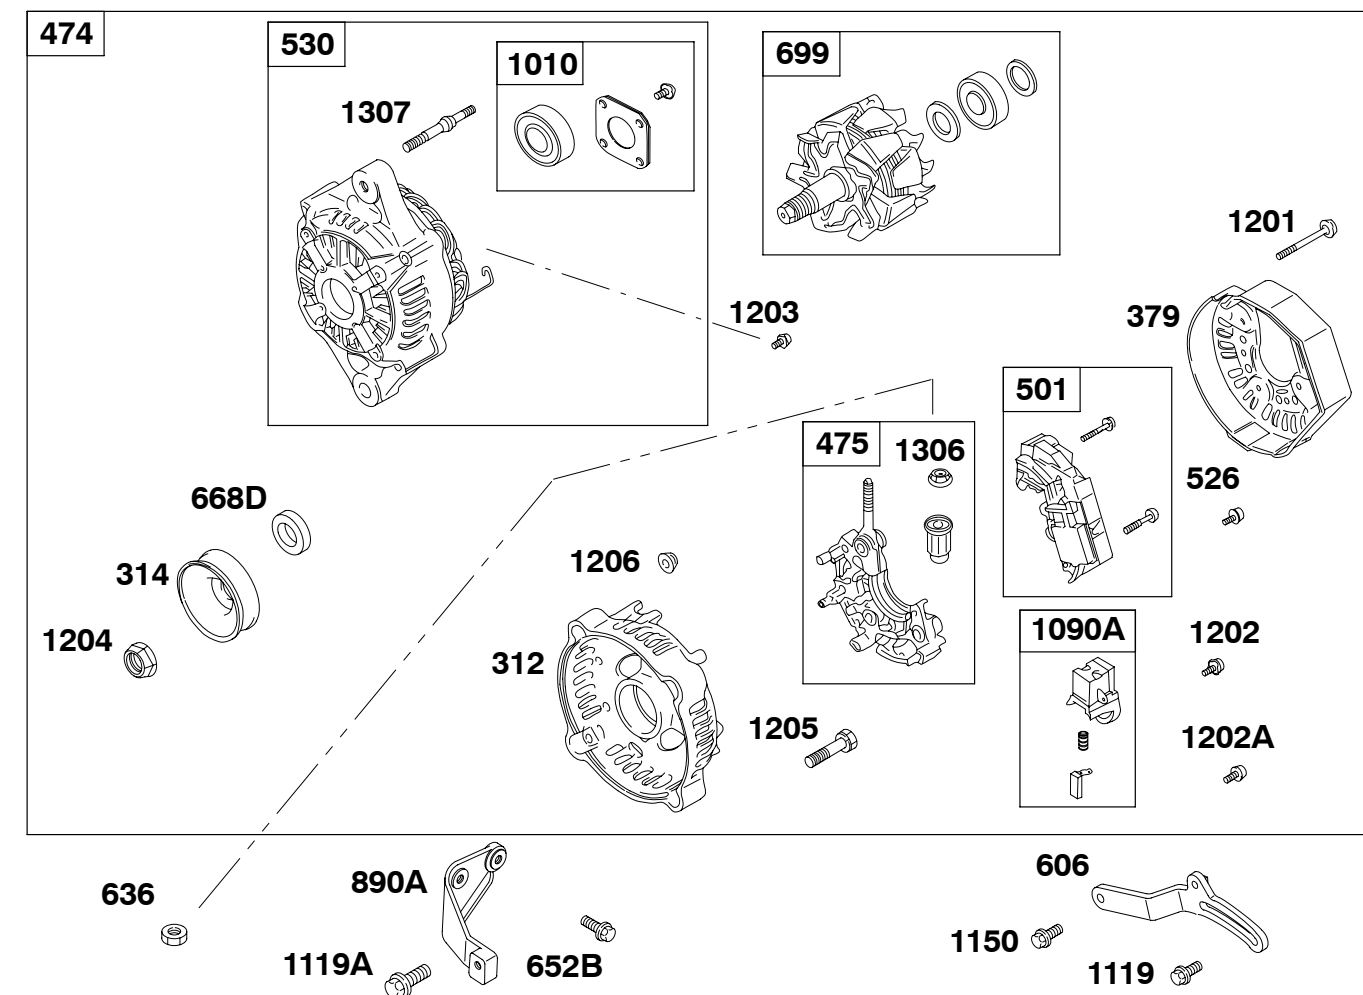

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
312	820692	Housing-Brush End	668D	820713	Spacer (Rotor Assembly)	1201	820715	Screw (Brush Cover)
314	820711	Pulley-Alternator	699	825390	Rotor Assembly	1202	820701	Screw (Brush Retainer)
379	820703	Cover-Brush	890A	820213	Bracket-Support (Alternator)	1202A	820702	Screw (Brush Retainer)
474	825084	Alternator	1010	825384	Retainer-Bearing	1203	820702	Screw (Ground Terminal)
475	825385	Rectifier	1090A	825387	Retainer-Brush	1204	820705	Nut (Alternator Pulley)
501	825388	Regulator	1119	820483	Screw (Alternator)	1205	820707	Screw (Brush End Housing)
526	820702	Screw (Regulator)	1119A	820270	Screw (Alternator)	1206	820709	Nut (Brush End Housing)
530	825383	Housing-Drive End	1150	820023	Screw (Adjusting Strap)	1306	820781	Nut (Rectifier)
606	820819	Strap-Adjusting				1307	820690	Stud (Drive End Housing)
636	820069	Nut (Starting Switch)						
652B	820275	Screw (Support Bracket)						

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095



Carburetor Overhaul Kit-Reference 121, 121A, 121B

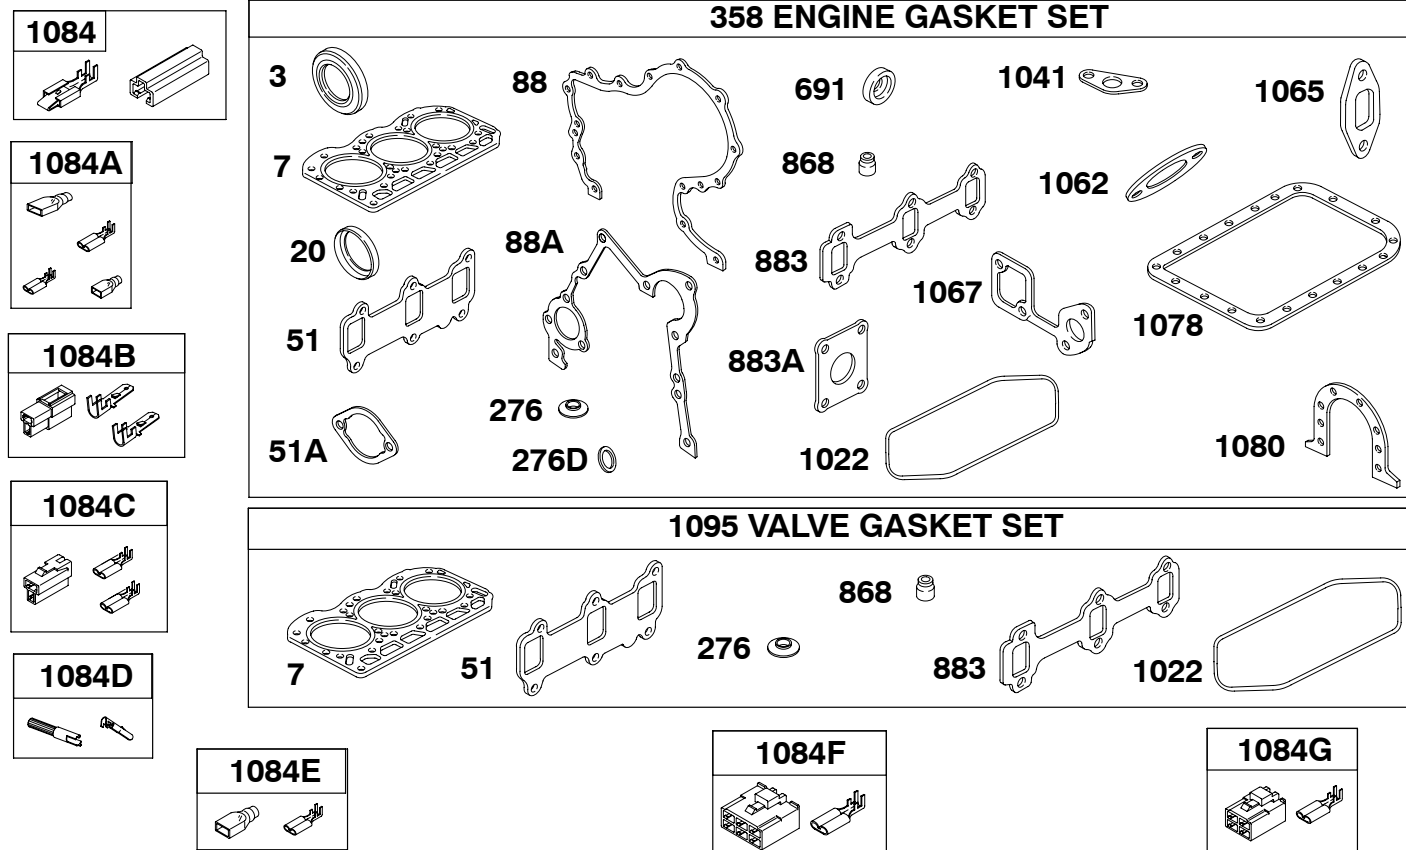

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	821071	Seal–Oil (Magneto Side)	358	825338	Gasket Set–Engine	1084	825154	Connector–Terminal
7	820648	Gasket–Cylinder Head	691	820054	Seal–Governor Shaft	1084A	825155	Connector–Terminal
20	821073	Seal–Oil (PTO Side)	868	820041	Seal–Valve	1084B	825156	Connector–Terminal
51	820087	Gasket–Intake (Intake Manifold)	883	820817	Gasket–Exhaust (Manifold)	1084C	825157	Connector–Terminal
51A	820385	Gasket–Intake	883A	821001	Gasket–Exhaust (Muffler)	1084D	825158	Connector–Terminal
88	820148	Gasket–Gear Reduction Cover	1022	820150	Gasket–Rocker Cover	1084E	825160	Connector–Terminal
88A	820155	Gasket–Gear Reduction Cover	1041	820104	Gasket–Oil Pump Screen	1084F	825162	Connector–Terminal
276	820064	Washer–Sealing (Rocker Cover)	1062	820093	Gasket–Outlet Housing	1084G	825163	Connector–Terminal
276D	820582	Washer–Sealing (Oil Drain Plug)	1065	820098	Gasket–Inlet Housing	1095	825339	Gasket Set–Valve
			1067	820100	Gasket–Water Pump			
			1078	820137	Gasket–Oil Pan			
			1080	820145	Gasket–Seal Retainer			

Engine Gasket Set–Reference 358
Valve Gasket Set–Reference 1095

Carburetor Overhaul Kit–Reference 121, 121A, 121B

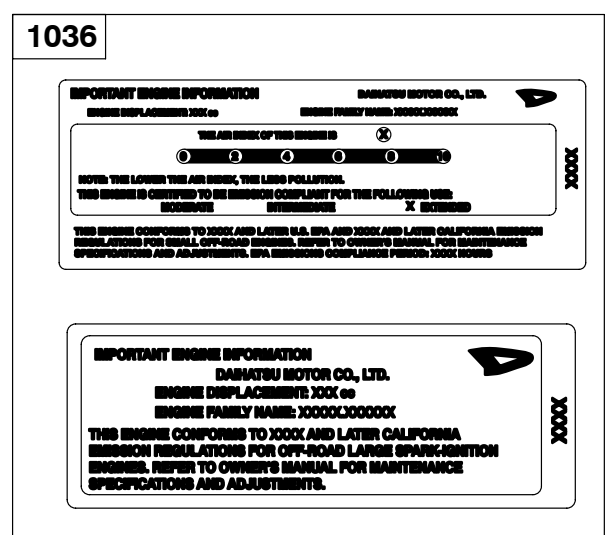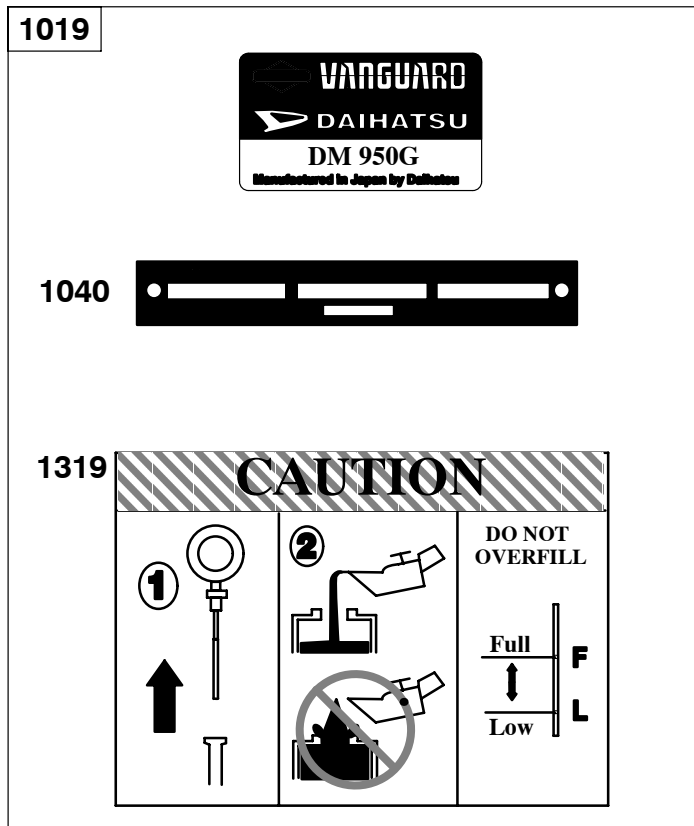

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1019	825652	Kit-Label Used on Type No(s). 0305, 0310, 0322. ----- Note ----- 825618 Kit-Label Used on Type No(s). 0308, 0334.	1036		Label-Emissions (Available from Authorized Briggs & Stratton Dealer)	1319	821160	Label-Warning
			1040	820290	Plate-Trim	1330	MS0750	Repair Manual (Refer to Repair Manual For Assembly and Torque Requirements)
			1058	275666	Operator's Manual			

Engine Gasket Set-Reference 358
Valve Gasket Set-Reference 1095

Carburetor Overhaul Kit-Reference 121, 121A, 121B